

Hunter®

 **Hydrawise™ Ready**
IRRIGATION CONTROLLERS

Hydrawise Software/App Owner's Manual



hydrawise.com

Table of Contents

Table of Contents	2
Controller - Navigating Screens	5
Wireless - Connecting to Network	5
Using The Wizard	5
Viewing Wireless Settings	6
Configuring Wireless Name	6
Configuring the security type	6
Setting your password	6
Wireless Connection Status Messages	7
Troubleshooting Wireless Connecting Issues	7
Wireless - Connection Status Messages	7
Controller - Viewing Controller Status	8
Server Status	8
Success	8
Offline	9
Saving Settings	9
Serial Number	9
Controller - Viewing Network Information / Testing Internet Connectivity	9
Controller - Viewing Time and Date	10
Controller - Installing and Wiring	10
Hardware Installation	10
Controller Location	10
Cable Entry	10
Mounting the Controller	11
Connecting Solenoid Valves	11
Solenoid Valve Wiring	11
Connecting the Plug Pack	12
Connecting Sensors or Flow Meters (Optional)	12
Troubleshooting Zone Issues	12
Controller - Function Paths	12
Account/Controller - Manual Run All Zones	13
Running a zone manually from your web browser or app	13
Running all zones manually	13
Running a zone manually from the controller	14
Controller - Factory Reset	14
Controller - Serial Number Location	15
Account - Language	16
Account - Set Up Wizard	17
Account - Getting Started	20
Account - Linking Controller	20
Account - Adding a Controller	20
Account - Zones and Schedules	22
Account - Station Run Time and Frequency	28
Configuring - Watering Start Times And Water Days	29
Account - Controller Weather Stations	32
Account - Watering Triggers	33
Suspend Watering – Weather Forecasts	34
Suspend Watering – Weather Station Measurements	34

Variable Watering	35
Triggers for Smart (ET) Watering	35
Account - Alerts	35
Account - Controller Configuration	36
Account - Account Details	38
Account - Dashboard View	41
Controller Dashboard	41
Account - Changing Current Controller	43
Account - Assigning Images on Mobile	44
Account - System Shut Off	48
Account - Delete Controller	49
Alerts - Auto suspend for high flow	50
Account - Virtual Solar Sync	52
Account - Units of Measurement	54
Account - Link to Contractor	55
Account - Cycle/Soak Operation	56
Account - Account Name Edit	56
Account - Rename Controller	57
Account - Add User/Files	58
Add User	58
Account - Setting Delay	60
Account - Exporting Reports	60
Account - Editing Serial Number	61
Account - Resetting Password	62
Account - Not Receiving Hydrowise Activation Emails	63
Account - Translation Options	63
Configuring - Several Watering Lengths One Zone	65
Configuring - Preconfigured Schedules	67
Configuring - Trigger "Water More Often When Hot"	68
Smart Watering - Quick Reference	70
Smart Watering - Adjustment and Changes	71
Wireless - Wi-Fi Specifications	73
Wireless - Connecting to Hotspot	74
Wireless - Controller Not Connecting	75
Wireless - Static IP Address	76
Offline Mode - Accessing Offline Mode	77
Offline Mode - Run the Setup Wizard	78
Offline Mode - Sensors	80
Offline Mode - Seasonal Adjust	80
Account - GraphQL API	82
Smart Voice Device - Amazon Alexa	83
Home Automation - Control4	86
HPC - Installation	86
HPC - Hunter Remotes	87
HPC- WRCLIK and HC Flow Meter	88

Flow Meter - Install Chart	89
Flow Meter - Quick Start Guide	90
Flow Meter - Specifications	90
Flow Meter - Test	90
Flow Meter - Custom Flow Sensor Configuration	91
Flow Meter - Winterization	92
Sensors - Configuration	93
Flow Meters	93
Rain/Moisture Sensors	93
Wiring	94
Sensors - Klik Sensor Status	97
Normally Closed (Default Setup)	97
Sensors - Installing Personal Weather Station	97
Valve - Wire Distance	98
Valves - Wiring Diagram	98
Master Valve - Configuration	99
How does it work?	99
Configuring Master Valve - HC	100
Configuring Master Valve - PRO-HC	100
Configuring Master Valve - HPC-FP (Panel for PC-400 controller)	100

Controller - Navigating Screens

The controller features a full color touchscreen making navigation easy.

The Home screen, shown below, has 3 buttons allowing you to view and run your irrigation zones, change controller settings or view status information.



- 1 Touch to view all zones
- 2 Touch to change controller settings
- 3 Touch to view controller status information

Each screen (except for the home screen) has two buttons at the top of the page allow you to quickly navigate to the Home screen or the previous screen.



- 1 Go to previous screen (changes not saved)
- 2 Go to Home screen (changes not saved)
- 3 GREEN items indicate settings which can be changed
- 4 GREY items indicate status information

All items on each screen are color coded to indicate which screen elements are buttons and which screen elements indicate status information.

GREEN screen items indicate settings that can be changed. If you touch on the GREEN color item then you'll be able to change that setting.

GREY colored items indicate status information. Touching on these has no effect.

If you're entering information into the controller and use the Home or Back buttons then your changes on that screen will not be changed.

Wireless - Connecting to Network

When your controller is first powered on it will run a short wizard to connect your controller to your wireless router.



If you're not using the initial startup wizard then go to the section Viewing Wireless Settings to change your wireless settings.



Using The Wizard

1. Select your wireless network from the list shown on the controller display and press the Confirm button on screen.


If your network is not listed then check that the unit is within wireless range.

2. Enter your wireless password and press the **OK** button on keyboard.

Make sure you press the OK button after you've entered your password. Pressing the Home  or Back  buttons will not save your changes.

When connecting to your wireless, the WiFi Icon  at the bottom right of the controller screen will flash. Connecting takes about 30 seconds and when successfully connected the WiFi Icon  will stop flashing and stay on.

Viewing Wireless Settings

From the Home  screen, navigate to the Wireless Settings by pressing Settings and then Wireless



- 1 Touch to change wireless access point
- 2 Current wireless connection status
- 3 Touch to change wireless security type
- 4 Touch to change wireless password

To successfully connect the Hydrawise unit to your wireless router you will need to correctly select your wireless router, wireless security mode and enter your wireless password.

The current status of the controller's connection to your wireless router is shown at the top of the screen. The controller will automatically attempt to connect to the configured access point if a connection is lost (for example, after power failure).

Touch on any of the green buttons to change the wireless type, security type or password.

Configuring Wireless Name

Touching on the currently configured **Wireless Name** will automatically start a scan of all local wireless routers and allow you to choose a new one.

After about 5 seconds a list of found wireless networks will be listed. To select a wireless name, touch on the wireless name and then touch **Confirm**. Do not press the **Home** or **Back** buttons after selecting your wireless router name – these options will not save your router name.

Each time you touch a wireless name the signal strength will be shown at the bottom of the screen.

If your wireless router is not shown then check the following –

- Your Hydrawise controller is within range of your wireless.
- Your access point is configured to accept connections from 802.11b/g wireless clients.

If your wireless router is hidden you may manually enter it by selecting Manually enter **wireless** and typing in the name.

Configuring the security type

The security type configured on the controller must match the security type configured in your wireless router. The Hydrawise unit can attempt to automatically detect this if you choose **Auto Detect** as the security type.

Hydrawise supports the following security types –

- Open
- WPA Personal
- WPA2 Personal
- WPA Auto

After choosing the security type press the Confirm button.

Setting your password

For any security mode (except for Open) your wireless router password must be entered. Wireless passwords are a minimum of 8 characters and are case sensitive.



After typing in your password press the OK button. Do not press the Home or Back buttons – these options will not save your password.

Wireless Connection Status Messages

The controller will show different status messages whilst connecting to your wireless router.

WIRELESS CONNECTION STATUS MESSAGES	
Status	Description
Looking for Wireless...	Controller is currently scanning for local wireless networks.
Connecting to...	Controller is currently trying to connect to your wireless router.
Waiting for IP	Controller has connected to your wireless router and is waiting for your wireless router to give it an IP address. Your wireless router must be configured as a DHCP server.
Connected	All is good. Controller has successfully connected to your wireless router.
Local Connection Only	Controller is acting as a local wireless router.

Troubleshooting Wireless Connecting Issues

After entering your wireless settings the controller will connect to your access point. The connection process takes about 30 seconds.

Upon successful connection the wireless status will show Connected.

If your controller fails to connect to your wireless router check the following –

- Your password is entered correctly. It is case sensitive and must be at least 8 characters long.
- Check that the wireless security types match between the controller and your wireless router. Hydrawise recommends use of WPA2 security between the controller and your wireless router.

Wireless - Connection Status Messages

The controller will show different status messages while connecting to your wireless router.

Looking for Wireless	Controller is currently scanning for local wireless networks.
Connecting to	Controller is currently trying to connect to your wireless router.
Waiting for IP	Controller has connected to your wireless router and is waiting for your wireless router to give it an IP address. Your wireless router must be configured as a DHCP server.
Connected	Controller has successfully connected to your wireless router.
Local Connection Only	Controller is acting as a local wireless router.

Troubleshooting Wireless Connection Issues

After entering your wireless settings, the controller will connect to your access point. The connection process takes about 30 seconds.

Upon successful connection the wireless status will show **Connected**.


If your controller fails to connect to your wireless router check the following:

- Your password is entered It is case sensitive and must be at least 8 characters long.
- Check that the wireless security types match between the controller and your wireless Hydrawise recommends use of WPA2 security between the controller and your wireless router.
- We have WiFi specifications here: [WiFi Specs](#)

Controller - Viewing Controller Status

From the Home screen navigate to the Controller Status by pressing Status⇒Controller Status.

The controller status screen shows your controller's connection to Hydrawise servers for synchronizing schedule and weather information.

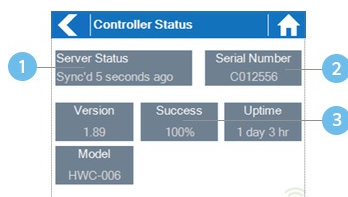

- 1 Status of Connection to Hydrawise Servers
- 2 Your Serial Number. Used to link your controller to your account
- 3 Connection to Hydrawise Success Rate

Server Status

A successful connection to the Hydrawise servers is indicated by **Sync'd** as the Server Status.

Different types of status messages are shown below –

SERVER STATUS MESSAGES

Status	Description
Sync'd	All is good. Controller has a connection to Hydrawise servers.
No Internet	Controller has connected to wireless but is unable to connect to Hydrawise servers. Check that your internet is OK by connecting another device to the same wireless router. If this is OK then go to Status⇒Network and select Test Network to perform a diagnostics test.
Wireless Down	Controller has not connected successfully to your wireless. Go to Settings⇒Wireless Settings to check the wireless status.
Checking	The controller is checking the connection to Hydrawise.
Error XXX	The controller received an error whilst connecting to the Hydrawise server.

Success

The success percentage shows the percentage of time the controller successfully connects to Hydrawise servers to synchronize weather and schedule-related information.

A low success percentage will indicate a poor wireless connection between the controller and your access point.

To improve your wireless signal strength you could try the following –

- Move the controller closer to your wireless router.

- Remove any obstacles in a direct line of sight between the controller and your wireless router such as metal items (metal is an extremely good isolator for WiFi signals).
- Move your wireless router closer to the controller.
- Install a higher gain antenna on your wireless router.
- Use Ethernet to a location closer to the controller and install a new wireless router.
- Consider a WiFi repeater/extender between your wireless router and the Hydrowise controller to boost the signal strength.
- Consider moving the controller away from potential sources of interference, including microwave ovens, nearby base stations using adjacent channels or cordless telephones operating in the 2.4GHz range (you could also change the channel your phone uses).

Note that the Hydrowise unit is designed to work in poor wireless environments. However, if you wish to manually run or stop a zone and the wireless signal is down then these actions will fail.

Offline

If the controller loses internet for more than 24 hours you'll receive a notification email.

The controller will go into an offline mode. In offline mode, your controller won't be able to access local weather conditions such as rainfall or evaporation and will revert to a pre-defined program.

- For Smart Watering zones, the controller will adjust each zone's watering length based on your offline watering budget and will water at each zone's configured peak watering frequency.
- For Time Based Watering zones, the controller will adjust each zone's watering length based on your offline watering budget and will water at each zone's configured watering frequency.
- For more information on Smart and Time Based Watering, see ["Configuring Irrigation Zones"](#).
- Note that Cycle & Soak is not supported in Offline Mode and each zone will water for its full watering length without pausing.
- The controller will only water at your configured Program Start Times.

Saving Settings


The controller does not need a battery, all settings are saved in a non-volatile RAM (memory).

Serial Number

The serial number is used to link your actual controller with your Hydrowise account. This number is also printed on the rear of the controller.

Controller - Viewing Network Information / Testing Internet Connectivity

From the Home screen navigate to the Network Status by pressing Status⇒Controller Status.

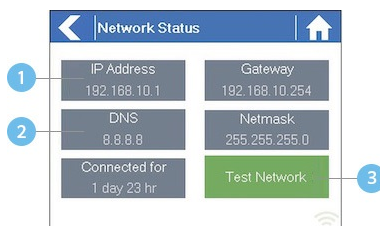

- 1 IP Address (set by your wireless router)
- 2 DNS Address (set by your wireless router)
- 3 Network Test Button

All settings on this page are provided to the controller by your wireless router when it first connects via a protocol, known as DHCP. If any of these settings appear incorrect please change them in your wireless router.

Once the controller has successfully connected to your wireless router the Test Network button can be used to test network connectivity for troubleshooting purposes. The network test will verify connectivity to 4 destinations –

Test Network

Message	Description
Checking WiFi	Performs a ping test to the Gateway address listed in the Network Status screen. If this test fails, check that you don't have MAC address filtering enabled on your router.
Checking DNS	Performs a ping test to the DNS address listed in the Network Status screen. If this test fails, check that the DNS address is correct – if it is wrong then correct the DNS address under DHCP Settings on your wireless router. It is possible that this test may fail if the DNS server doesn't accept ping requests which do not indicate an issue.
Checking Internet	Performs a ping test to the Google server at IP address 8.8.8.8. This is a well-known server which accepts ping requests on the internet. If this test fails then it indicates an issue with the internet configuration of your wireless router.
Checking Hydrowise	Performs a ping test to the Hydrowise servers. If this test fails then it may indicate an issue with the internet configuration of your wireless router.

Controller - Viewing Time and Date

Time and date settings are synchronized with the settings that you configure in the Hydrowise app. The timezone is set based on the location you entered during the app wizard.



If your controller is running as a stand-alone controller (WiFi is disabled) then the date, time and time zone will be shown on a GREEN background can be changed.

Controller - Installing and Wiring

After you have unpacked your Hydrowise irrigation controller, there are two simple steps to get started:

1. [Hardware Installation](#)
2. [Connecting Solenoid Valves](#)

You can also find the instructions included with the controller on our [Downloads](#) page.

NOTE: Once you've wired and installed your controller, please see [Configuring Your Controller](#) for instructions on how to connect to your Wi-Fi.

Hardware Installation


Controller Location

The Hydrowise controller is designed for installation in a protected location.

IMPORTANT: The chosen location must have Wi-Fi coverage. Wi-Fi coverage can be easily checked using an iPhone or smartphone that has Wi-Fi connectivity, or on the Hydrowise unit itself (signal strength is shown when you select a wireless name).

Cable Entry

The controller has two cable entry options: from the rear of the case, or via a conduit from the bottom of the controller.

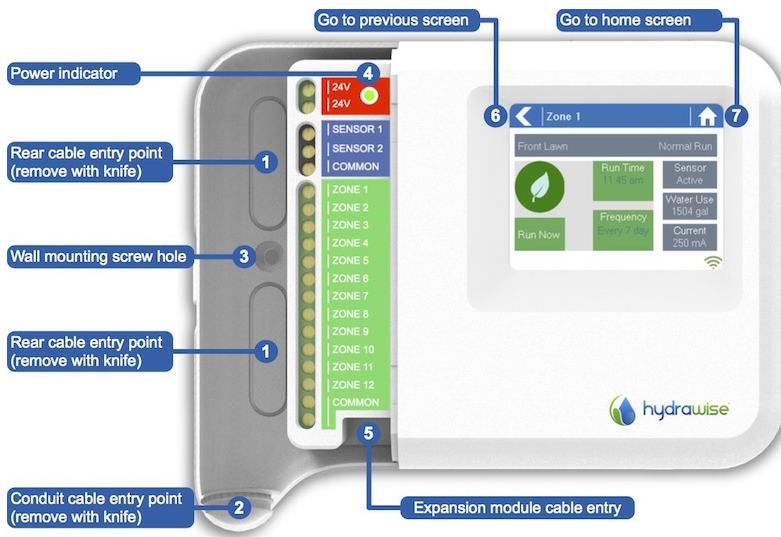

Entry from the rear of controller	Using a sharp knife, remove the two cutouts on the rear of the controller as indicated on the diagram in label 1.
Entry via 3/4 inch conduit	Using a sharp knife, cut around the semicircular line on the controller as indicated on the diagram in label 2. Cut around the matching line on the blue controller wiring cover.


Mounting the Controller

1. Using a 3/16-inch diameter drill bit, drill a hole to a depth of 1 inch (25 mm).
2. Insert plastic anchor so it is flush with the surface of the wall.
3. Screw 1-inch screw into plastic anchor, leaving the head protruding about 1/8 inch.
4. Slide the controller case over the screw head.
5. Mark your second mounting point (see label 3 in the diagram). Then remove the controller, drill a hole, and insert a plastic anchor. Finally, slide the controller case over the first screw head and screw it into place.

Connecting Solenoid Valves

Depending on the model you purchased, your controller has either 6 or 12 zones. For convenience, there are three common wiring points, and any or all of them can be used.

Refer to the diagram below when connecting your solenoid valves to the controller.

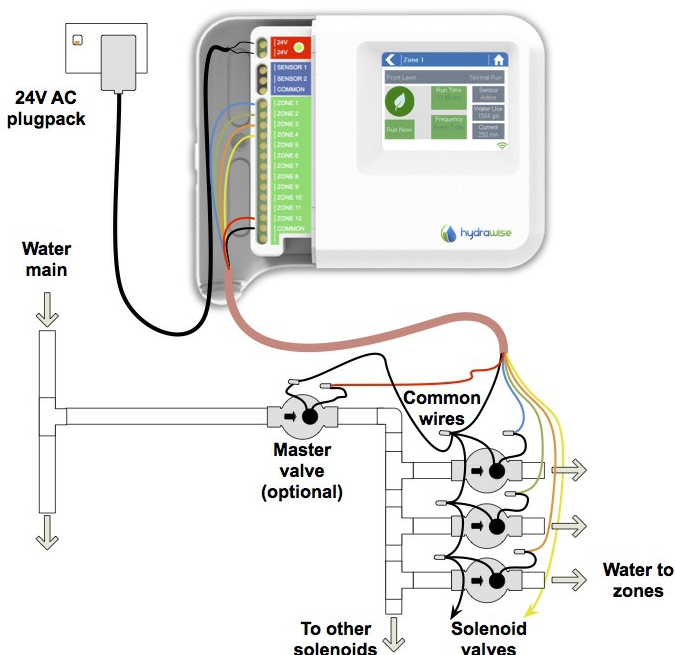

Solenoid Valve Wiring

1. Take one wire from each solenoid. Twist the wires together and connect to the COMMON (usually black) wire of your multicore irrigation cable. Hydrowise recommends that all connections be sealed against moisture for long-term reliability.
2. Connect each of the other individual solenoid wires to a different wire in the multicore cable and seal. Record zones against wire color for later reference.
3. Connect the common wire from the multi-strand cable (usually white) to any of the three terminals on the controller marked COMMON.
4. Connect each of the other solenoid wires to one of the zone inputs.
5. If a master valve (sometimes labeled as MV on other controllers) is installed, this can be connected to any spare zone, as any of the zones can be assigned as a master valve output. The configuration of the master valve in the Hydrowise app is required.
6. Click the blue wiring cover into place to seal the controller and protect the wiring.

Connecting the Plug Pack

1. Use the plug pack supplied and connect the wires to the red AC terminal blocks on the unit marked as 24V. The polarity of the wiring is not important.
2. Turn the power on. The power indicator will light up (see label 4 on the previous diagram).

Connecting Sensors or Flow Meters (Optional)

Hydrowise supports most open/close contact sensor types, such as standard rain sensors and soil moisture sensors.

1. Connect one sensor wire to COMMON on the controller.
2. Connect the Normally Closed or Normally Open wire from the sensor to SENSOR1 or SENSOR2 on the controller, and configure in the Hydrowise app.

For full details, refer to the instructions provided with your sensor or flow meter. Instructions for configuring the controller for a sensor are available [here](#).

Troubleshooting Zone Issues

- Try running a zone from the controller's touch screen. If it works from the controller and doesn't work from the app, check that you have linked your controller's serial number to your account (see the previous section for details) and check your controller's wireless status.
- If your old controller had a master valve (sometimes referred to as MV), you must configure a master valve in the app and wire it to a spare zone on the controller. Detailed instructions can be found on the Hydrowise website.
- Check that your wiring is correct. If no zones start, check that your COMMON wire is correctly cabled.

Controller - Function Paths

Below is a list of function paths for use with the controller interface in both online mode and offline mode.

Online Mode:

Change Wi-Fi/Check Status: Home>Settings>Wireless>Select a Setting to Modify

Controller Status: Home>Status>Controller Status

Program Expander: Home>Status>Expansion Modules

Manually Run Zone(s): Home>Zones>Select Zone> Run>Enter Time>OK

Model: Home>Status>Controller Status

Network Status: Home>Status>Network

Reboot Controller: Home>Settings>Config>Reboot Controller

Reset Controller: Home>Settings>Config>Factory Default

Run Wizard: Home>Settings>Run Wizard

Sensor Status: Home>Status>Sensor

Serial Number: Home>Status>Controller Status

Server Status: Home>Status>Controller Status

Test Network: Home>Status>Network>Test Network

Test Zone: Home>Status>Zone Tester

Time and Date: Home>Status>Time

Version Number: Home>Status>Controller Status

Zone Status: Home>Zones>Select Zone

Offline Mode:

(Note: Changes can be done in offline status only when Wi-Fi is disabled.)

Adjust Time: Home>Settings>Offline Status>Time

Disable Wi-Fi: Home>Settings>Offline Status>Disable Wi-Fi

Program Expander/Check Status: Home>Settings>Offline Status>Expansion Modules

Program Sensor/Check Status: Home>Settings>Offline Status>Sensors


Program Start Times: Home>Settings>Offline Status>Program Start Times


Set Seasonal Adjust: Home>Settings>Offline Status>Seasonal Adjust

Account/Controller - Manual Run All Zones

You can run an irrigation zone on demand from the Hydrowise unit, from your web browser, or from your iPhone/Android app.

Running a zone manually from your web browser or app


From the web or app **Dashboard**, click or touch the zone icon you wish to run and click the **Run**  button. Select the zone's run time and click OK.




The zone will start running within a few seconds.

Running all zones manually

You can also run all zones in sequence by clicking on the gear icon as shown below.

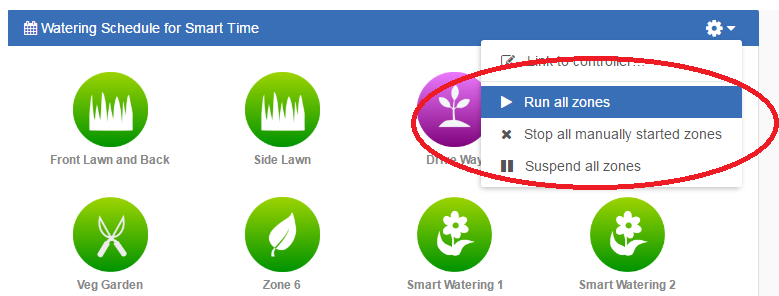


The zones can be run for a specified length of time or can run for their normal programmed time.

TIP: To stop a zone that is currently running, click the **Stop**  button on your Dashboard.


Running a zone manually from the controller

From the **Home** screen, navigate to the **Zone Summary** screen by pressing **Zones**.

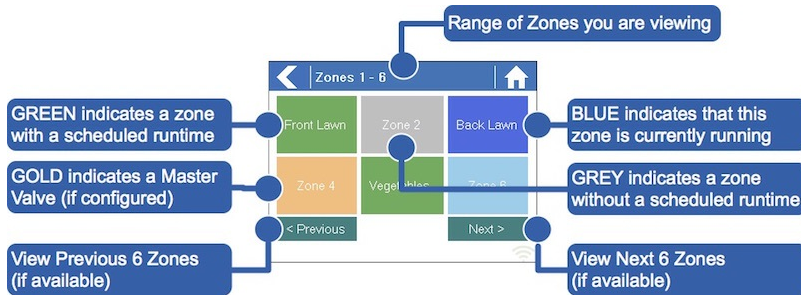

The Zone Summary screen shows the status of six zones at a time. To view the next or previous group of zones, use the **Next** and **Previous** buttons. The current range of zones that you are viewing is indicated at the top of the screen.

From the Zone Summary screen, touch the zone you wish to view.

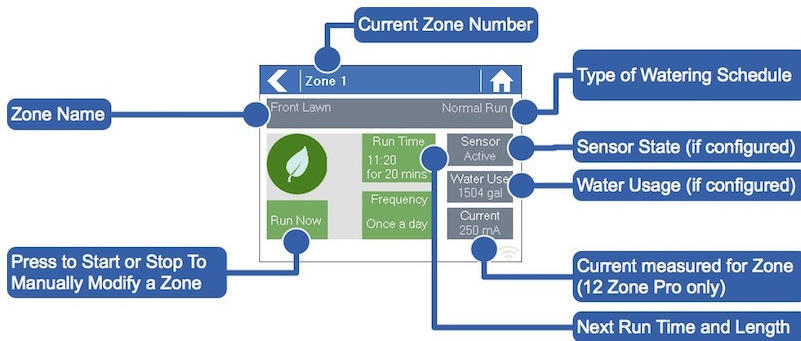


From the Zone Status screen, you can manually start a zone using the **Run Now** button. When started, the zone will run for the zone's default configured run length. This can be overridden by clicking on **Run Time** prior to manually starting the zone.

When a zone is running, the **Run Now** button will change to **Stop**. This allows you to stop a running zone.


Controller - Factory Reset

Please follow the steps below to perform a factory reset on your controller.


Step 1: From the home screen, tap on **Settings**.

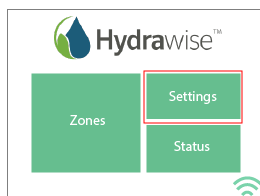


Step 2: Next, tap on **Config**.

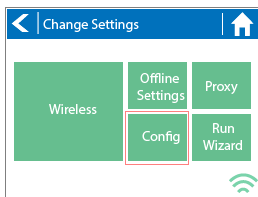

Step 3: Tap on Factory Default.

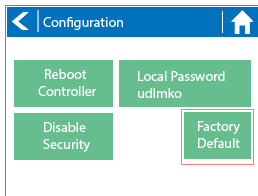

Step 4: Finally, tap on Erase Config.

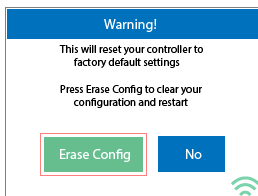

Congratulations, you have now successfully factory reset your controller. The controller is now ready for fresh configuration settings, either manually or automatically through synchronization with your Hydrowise account.


To link your controller to your account, refer to [Linking Your Controller to Your Account](#).

Controller - Serial Number Location


Your controller's serial number is found on the rear of your controller or on the controller's touch screen.

To access the serial number on the touch screen, follow these steps:

1. From the Home screen, click **Status**.

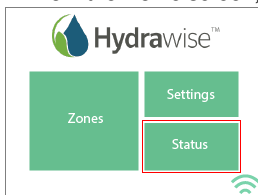

2. Then click **Controller Status**.

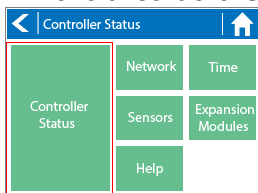


3. The serial number is shown on this screen. Note: The serial number contains only letters **a through f** and numbers **0 through 9**.



Controller Status		
Server Status Synced 0:05 ago	Serial Number C012345	
Version 2.17	Success 4 [4] ****	Uptime 1 day 3 hr
Model PHC-600		

To link your controller to your account, you can also refer to [Linking a Controller to My Account](#).


Account - Language

For information on changing the language on your account, please see the steps below:

1. Select the three gears on the upper right on the dashboard.
2. Click "My Account"
3. Click the  icon in the user settings box.
4. Scroll down to choose the correct language. Screenshots below:

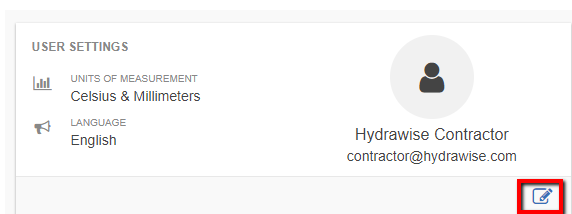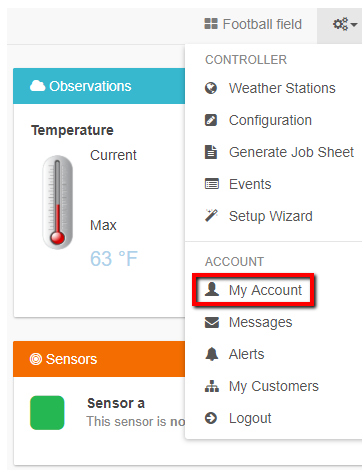

Edit User


Change picture

Name
Hydrawise Contractor

Email Address
contractor@hydravise.com

Units of Measurement
Celsius & Millimeters

Language
English

Change Password
Cancel
OK

Account - Set Up Wizard

To be able to configure your controller from the Hydrawise App or website you will need to connect your controller to the internet and link the serial number of the controller to your account.

The controller does not need to be connected to the internet when you're making your configuration changes if it isn't connected at the time the changes are made the new configuration will be loaded once the controller connects to the internet.

The Getting Started wizard is shown when you first create a new account or when you select **Settings -> Setup Wizard** in the app.

1. If you have not already done so, create an account at the Hydrawise web Go to <http://hydrawise.com/try-now> and register for an account.
2. Log into your If this is the first time that you have logged in you will be guided through a setup wizard to help you with initial configuration of your controller.


Setting the Controller Model

The wizard will ask you to choose the model of your controller. You can search by SKU or simply select the model from the list. If you're setting up a trial account, choose the closest model to the one you want – you can always change it later.


1 Model ▶ 2 Name ▶ 3 Location ▶ 4 Master Valve ▶ 5 Add Zones ▶ 6 Set Watering Times

Select your controller model


Please choose a controller model. If you are just signing up for a trial then select a controller closest to the one you want - you can always change it later.



HC
6 or 12 Zone Controller
☐ 6 Zones
☐ 12 Zones



Pro HC Indoor/Outdoor
6, 12 or 24 Zone Outdoor Controller
☐ 6 Stations
☐ 12 Stations
☐ 24 Stations



HPC
Pro C WiFi Facepanel Upgrade
☒ 4 Stations
☐ Up to 16 Stations

Exit Wizard

Next ▶

Setting the Controller Name and Serial Number

The wizard will ask you to give your controller a name and also to enter the serial number. If you're setting up a test account and you don't yet have a controller you can leave the serial number blank.

1 Model ▶ 2 Name ▶ 3 Location ▶ 4 Master Valve ▶ 5 Add Zones ▶ 6 Set Watering Times

Controller Name

Please choose a name for your Hunter HC Controller

Exit Wizard

Back

Next ▶

Controller Location

Set the address where your controller is located. Your controller will use this address for weather forecasts.

1 Model ▶ 2 Name ▶ 3 Location ▶ 4 Master Valve ▶ 5 Add Zones ▶ 6 Set Watering Times

1943 Diamond Street, San Marcos, CA, United States

Wednesday's Forecast

75 °F
Partly Cloudy

0in (0%) Rainfall 47% Humidity 11 m/h Wind Speed

Weather Stations

Your Contractor plan allows you to choose 1 Free Airport Weather Station updated daily. You can upgrade to an Enthusiast plan at any time to support multiple weather stations with hourly updates. With multiple weather stations your weather readings are averaged out to give a higher degree of rainfall accuracy.

Closest Station 0.1 mi
Hunter Industries, San Marcos, California

18 Stations

- 3 Free Airport Weather Stations
- 15 Personal Weather Stations
- 3 Selected Weather Stations

When you click Update Address you will see local weather stations to which you can subscribe.

You can subscribe to one or more weather stations by clicking on them and choosing Subscribe. The weather stations that you've subscribed to will display in blue.

You can subscribe to one of the two closest airport stations for free – these will be updated daily.

If you have an Enthusiast plan you can subscribe to up to 5 personal, airport or other official stations. The advantage of subscribing to multiple weather stations is that the results will be evaluated to remove any particularly high or low readings which might be inaccurate.

Configuring the Master Valve

If your irrigation system has a master valve then configure it here.

1 Model ▶ 2 Name ▶ 3 Location ▶ 4 Master Valve ▶ 5 Add Zones ▶ 6 Set Watering Times

Configuring a Master Valve

A master valve is an automatic valve that is installed at the point where the irrigation system connects to the water supply. Typically one zone valve is turned on at a time, and controls the irrigation in a specific area of your garden. Whenever one of the irrigation zone valves is told to open by the controller, the controller also signals the master valve to open. On older controllers the master valve is typically labelled MV. Show wiring

Does your irrigation system have a Master Valve?

☒ No I don't have a Master Valve

☐ Yes I have a Master Valve

Exit Wizard Back Next

Adding Zones

Now you can add the zones for the various parts of your garden.

1 Model ▶ 2 Name ▶ 3 Location ▶ 4 Master Valve ▶ 5 Add Zones ▶ 6 Set Watering Times

Add Your Zones

Each of your controller's zones is listed below. Each zone is given a name and can water based on a fixed watering frequency or can water based on each zone's soil, plant type.

+

Add a New Zone

Exit Wizard

Back

Next

Setting Program Start Times

The last step in configuring your controller is to set up your program start times. These will tell your controller when it's allowed to water. You can set specific days of the week or use odd/even watering days. You can also set the time of day and then link the program start times to particular zones and schedules.

1 Model ▶ 2 Name ▶ 3 Location ▶ 4 Master Valve ▶ 5 Add Zones ▶ 6 Set Watering Times

Setting Program Start Times

Your controller's watering Program Start Times are listed below. These times specify when your controller is permitted to do any watering. ⓘ

+

Add Watering Time

Exit Wizard

Back

Next

Your controller is now configured and ready for use.

Account - Getting Started

We've designed our system to be as easy as possible to use, and have included articles online for most major functions that you'll want to perform with your controller.

Here's a list of pages to help you when configuring your Hydrowise irrigation controller:

1. [Register for an account](#) online if you don't already have one.
2. Go through the initial [configuration wizard](#) for your controller. ([video](#))
3. [Purchase your controller](#). (For assistance, contact your nearest Hunter distributor.)
4. Configure [wireless settings](#) on your controller.
5. [Wire your controller](#) to your solenoids.
6. [Link your account](#) to your controller's serial number.

Account - Linking Controller

After you receive your Hydrowise irrigation controller, you will need to link it to your Hydrowise account.


There are two locations where you can link your controller to your account:

- During the setup wizard (optional)
- From the controller **Dashboard**

NOTE: You only need to link your controller to your account once. If you provided a serial number when going through the setup wizard, you've successfully linked your controller to your account and you can ignore these instructions.

To link your controller through your account Dashboard, follow these steps:

- [Log in to your account](#).
- On the Dashboard, click on the Settings icon located on the blue Watering Schedule bar. Then click the **Link to controller...** button.
- Enter your controller's serial number. The eight-character serial number is found on the side of the unit. The serial number is not case-sensitive.

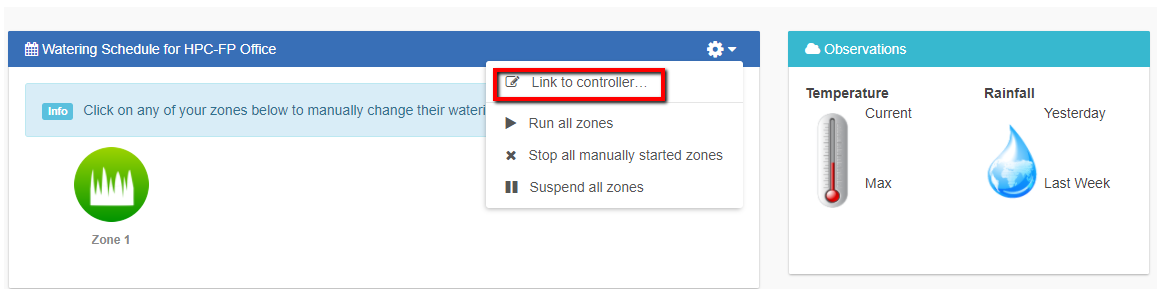

Once you've entered the serial number, your controller will automatically download your settings and begin watering based on your watering schedules.

Account - Adding a Controller

For information on adding a controller to your account, please see the steps and screenshots below:

1. Select the **"three gears"** on the upper right on the dashboard.
2. Click **"My Account"**

- Click the **+** button in the my controllers section.
- Add the new controller by inputting the name, serial number, location and model.
- Click **"create"**.

Plan	Max Controllers
Home Plan	3 Controllers
Enthusiast Plan	5 Controllers

Hunter Industries

Observations

Temperature

Current

Max

64 °F

Sensors

main flow

0 gal water usage

CONTROLLER

Weather Stations

Configuration

Generate Job Sheet

Events

Setup Wizard

ACCOUNT

My Account

Messages

Alerts

My Customers

Logout

My Controllers

Generate job sheet, change controller model, add or remove controller

My Controllers

Search

CONTROLLERS

+

Golf Room

Instructor Pro-HC

PI

ALBERTA

BRITISH COLUMBIA

WASHINGTON

MONTANA

OREGON

IDAHO

Add New Controller

Controller name

Enter the name of the new controller

Serial number

If you know the serial number of the controller enter it here, otherwise leave it blank

Location

Please enter your location

Cancel

< Prev

Next >

Create

Add New Controller

Controller model

Please choose your controller model



HC
 6 or 12 Zone Controller

☐ 6 Zones
 ☐ 12 Zones



Pro HC Indoor/Outdoor
 6, 12 or 24 Zone Outdoor Controller

☐ 6 Stations
 ☐ 12 Stations
 ☐ 24 Stations



HPC
 Pro C WiFi Facepanel Upgrade

☐ Up to 16 Stations

Cancel

< Prev

Next >

Create

Account - Zones and Schedules

Hydrawise supports 2 types of watering - [Smart Watering](#) or [Time Based Watering](#). Choosing which style of watering depends on a number of things, including your type of irrigation zone, if any watering restrictions exist in your area and personal preference (for example, for people who like to know that their irrigation will start on Mondays, Wednesdays and Fridays then Time Based Watering is ideal). Other topics covered in this article include:

[Add a Zone](#)

[Add Zone Images](#)

[Configure Master Valve](#)

[Configure Program Start Times and Water Days](#)

[Configure Preconfigured Water Schedule](#)

Time Based Watering

For Time Based watering you decide the watering frequency and irrigation run time, either by entering the information directly or choosing a preconfigured [watering schedule](#). The controller will use the Watering Triggers you've set to automatically adjust its watering schedule.

Time based watering will water on specific days (unless delayed by rainfall or forecast rainfall) and will vary the watering length based on your watering triggers.

Smart (ET) Watering


Smart (ET) watering is an automated watering schedule that uses information about environmental conditions to ensure your plants get the optimal amount of water. Evaporation will draw moisture from your garden, while rainfall and irrigation will add moisture. Understanding these conditions allows Hydrawise to decide when the time is right to water your garden. ET stands for evapotranspiration and is explained further in the diagram below.

For each zone, we'll ask you to specify the watering length and peak watering frequency:

- The watering length is how long watering needs to run to fully water your
- The peak watering frequency is how often you would normally water this zone during your peak irrigation period.


The controller will vary your watering frequency based on actual evaporation and rainfall in your area on a day to day basis.

In contrast to Time Based Watering, Smart Watering will always water a zone for the same length of time and it will vary the frequency of watering based on temperature and rainfall.

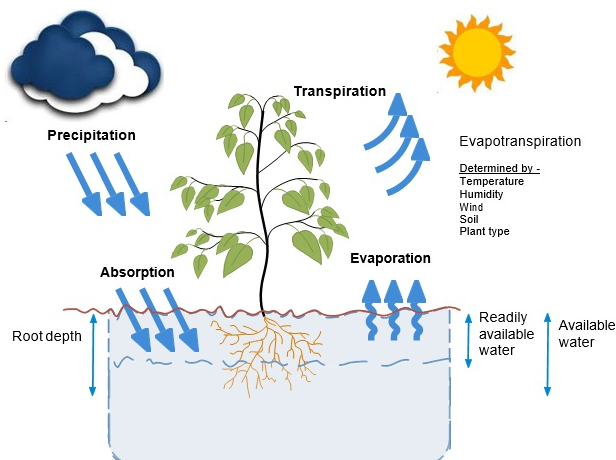

Adding a Zone

To add an irrigation zone, navigate to the **Zones & Schedules** page in your Hydrowise account and click on **Add a New Zone**. The Zone wizard will be displayed.

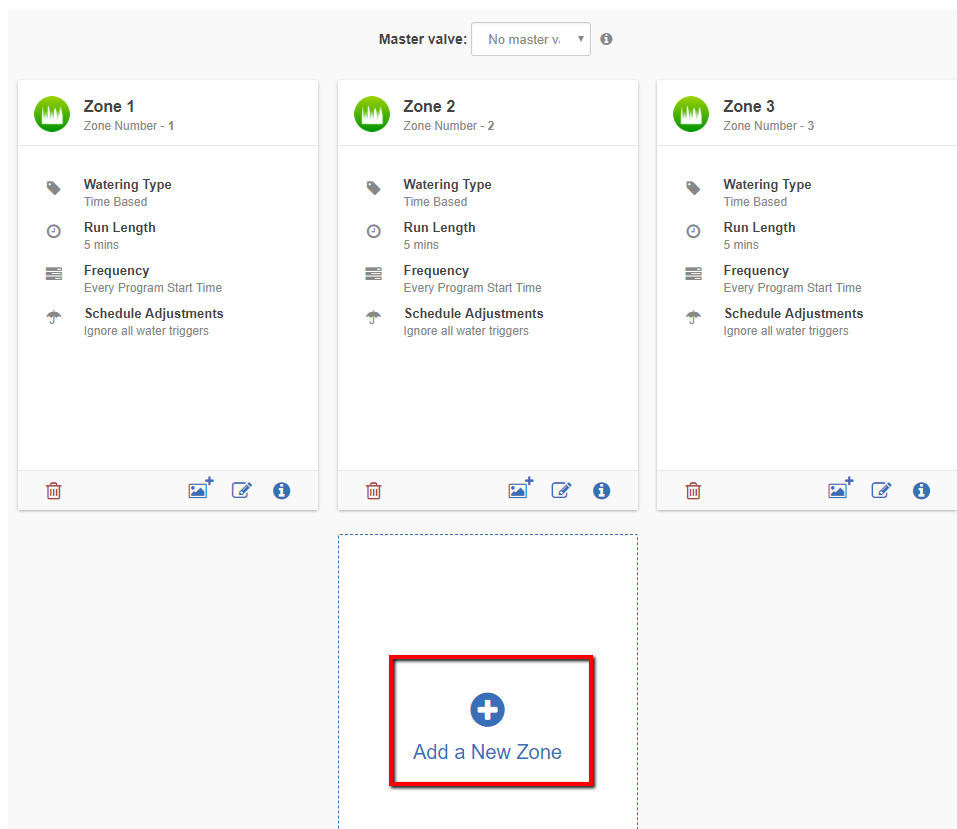

Fill in the Zone Details:

Zone Name: Use a meaningful name for each irrigation zone. Zone names are displayed on the Hydrowise controller and are used in your Hydrowise account to show run times and allow manual modification of watering schedules.

Zone Number: The zone number for each irrigation zone should match the number you have used when wiring the controller.

Zone Icon: Choose an icon which will be used to display the zone on the dashboard. If you have uploaded an image for this zone you can choose it to be displayed on the dashboard instead.

Watering Type: Select a watering mode for this zone. A zone can use Smart (ET) watering or Time Based watering, which are described below. Depending on the type of watering you chose, fill in the details for [Smart \(ET\) watering](#) or [Time Based watering](#).

Smart (ET) Watering

Watering Type: Choose whether to set the information manually or choose from a list of preconfigured watering schedules.

Enter Time and Frequency: allows you to manually set the watering length and frequency.

Use a preconfigured Watering Schedule: add a [preconfigured watering schedule](#) or use one you've previously created. If your controllers are managed by a contractor, you may see preconfigured watering schedules that your contractor has created, which you can also use.

Enter Time and Frequency: If you choose to enter the time and frequency, the following fields are available:

Watering Length: The number of minutes this zone will run for each time.

Peak Season Watering Frequency: How often the zone will normally run during your peak irrigation period. This frequency will be automatically adjusted throughout the year based on actual evaporation and rainfall.

Use a Preconfigured Watering Schedule: If you choose to use a preconfigured [Watering Schedule](#) you can either choose from a list of schedules you've previously created, or add a preconfigured watering schedule by entering the watering length and frequency and schedule modifications. If your controllers are managed by a contractor, you may see preconfigured watering schedules that your contractor has created, which you can also use.

Note that the Schedule Adjustment option in a preconfigured Watering Schedule is not used for Smart (ET) watering zones.

Cycle and Soak: Cycle and Soak is the ability to break the watering time into periods of watering (cycle) and pause (soak) to allow the water to soak into the soil without runoff. You can enable or disable Cycle and Soak. If you enable it, you need to specify the cycle and soak periods:

- Cycle Time- the maximum number of minutes the zone can run
- Soak Time- the minimum time between zone waterings to allow the water to soak into the soil

Tuning: Adjust the watering time for this zone from the calculated time. This allows you to fine tune your watering if your zone appears to be too dry or wet.

Time Based Watering

Watering Type: Choose whether to set the information manually or choose from a list of preconfigured watering schedules.

Enter Time and Frequency: allows you to manually set the watering length and frequency.

Use a Preconfigured Watering Schedule: add a [preconfigured watering schedule](#) or use one you've previously created. If your controllers are managed by a contractor, you may see preconfigured watering schedules that your contractor has created, which you can also use.

Enter Time and Frequency: If you choose to enter the time and frequency, the following fields are available:

Watering Length: The number of minutes this zone will run for each time.

Watering Frequency: Choose how often to water the zone.

Schedule Adjustment: Choose how to adjust the watering time based on your weather triggers.

Use a Preconfigured Watering Schedule: If you choose to use a preconfigured [Watering Schedule](#) you can either choose from a list of schedules you've previously created, or add a preconfigured watering schedule by entering the watering length and frequency and schedule modifications as per the fields above. If your controllers are managed by a contractor, you may see preconfigured watering schedules that your contractor has created, which you can also use.


Cycle and Soak: Cycle and Soak is the ability to break the watering time for a zone into periods of watering (cycle) and pause (soak) to allow the water to soak into the soil without runoff.


You can enable or disable Cycle and Soak. If you enable it, you need to specify the cycle and soak periods:

- Cycle Time: the maximum number of minutes the zone can run for
- Soak Time: the minimum time between zone watering to allow the water to soak into the soil


Tuning: Adjust the watering time for this zone from the calculated time. This allows you to fine tune your watering if your zone appears to be too dry or wet.

Adding Zone Images

You can upload multiple pictures of each of your irrigation zones to the Hydrowise system. To upload an image click on the Image Add button  next to the Zone Edit button.

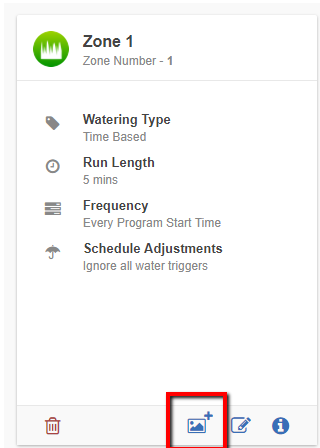

You can upload multiple images per zone. The total number of images that can be uploaded is based on the images size and is different for each account's Plan Subscription.







After an image is uploaded you can select an image to be displayed on the Dashboard by editing the zone  and selecting the image in the Zone Icon list.


Configuring a Master Valve (Sensors and Valves Section)

A master valve is an automatic valve that is installed at the point where the irrigation system connects to the water supply. (Sometimes this circuit is called a "pump start circuit." Both types of circuits work similarly and can be used for a pump and/or a master valve.) The controller turns the master valve on and off.

Zone valves are the individual valves that operate a group of sprinklers or drip emitters. Typically one zone valve is turned on at a time, and controls the irrigation in a specific area of your garden. Whenever one of the irrigation zone valves is told to open by the controller, the controller also signals the master valve to open - the master valve acts like a back up valve, or a fail-safe valve. The purpose of the master valve is to shut off the water to the irrigation system when none of the zone valves are operating.


The image below shows a master valve operating connected to Zone 12 on a Hunter HC controller.

-  Water main
-  Master valve (optional)
-  Solenoid Valves
-  Water to zones
-  Common wires
-  24V AC plug pack

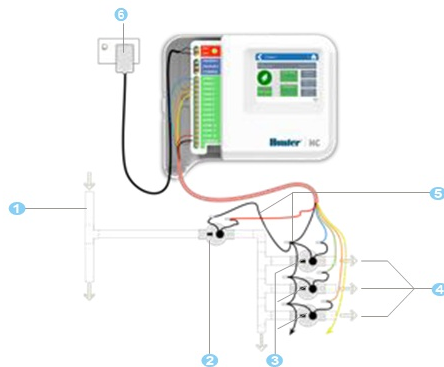


Different Hydrowise-Ready controller models have different options when selecting a master valve. With a Hunter HC controller, any one of your ordinary zones can be configured to act as a master valve, with all other Hydrowise-Ready controller models there is a dedicated master valve.

The master zone is configured on the Zones & Schedules page underneath your list of irrigation zones as highlighted in the image below.

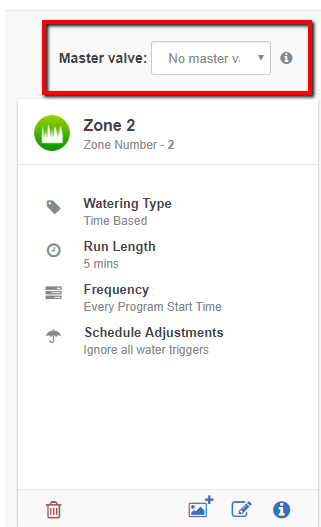

Configuring Master Valve - PRO-HC

With the Pro-HC, setting the master valve (MV) is similar. All you need to do is select whether you have a MV as shown below.




You no longer have to select which zone the MV is connected to, as the option will be different depending on the controller you select when setting up your controller for the first time.


Initially there is no master valve configured.

Configuring Master Valve - HPC-FP (Panel for PC-400 controller)

The default is for all stations to have the master valve/pump start circuit ON. The master valve/pump start can be set **ON** or **OFF** by station, regardless of which program the station is assigned.

Please follow the steps for initializing the P/MV for each zone.

1. Click the  icon for the zone in "zones and schedules"
2. Click **Next** three times to enter the advanced section or programming.
3. You can now choose either of the following:
 1. Use **Global Master Valve Setting** (Turns the P/MV circuit ON)
 2. Use **Disable Master Valve** (Turns the P/MV circuit OFF)
- 4.

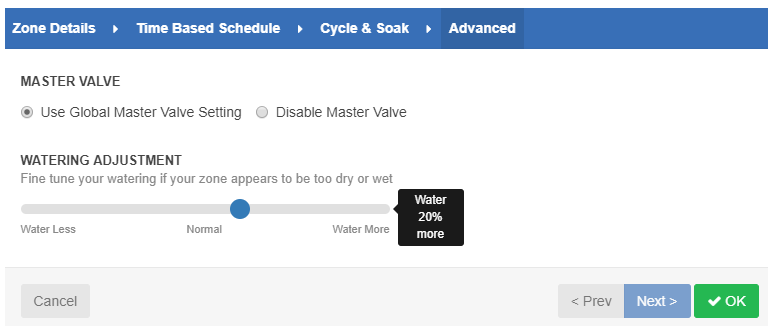

Configuring Program Start Times

Your controller's watering Program Start Times specify when your controller is permitted to do any watering. If multiple zones are using the same Program Start Time, then they will be started in sequence (only one zone can run at a time).

To add a program start time, navigate to the Zones & Schedules page in your Hydrowise account and click on Add Watering Time.

Start Time: Enter the time for this Program Start Time.

Watering Type: Choose the watering type for this Program Start Time. For example, choose odd or even weeks.

Watering Days: Choose which days this Program Start Time applies to. For example, choose odd or even days, or select specific days of the week.

Set Time ▶ **Select Zones**

START TIME
Enter the time for this Program Start Time

WATERING TYPE

Normal watering time (every week) ▼

Normal watering is permitted to start at this time

WATERING DAYS
Select the days of the week to water

Selected Days of the week ▼

SN M T W TH F S

Cancel

< Prev

Next >

✓ OK

Then select the zones to which this Program Start Time applies. Either apply it to all zones or select from a list of zones or [Preconfigured Watering Schedules](#).

Configuring Preconfigured Schedules

Preconfigured Watering Schedules allow you to group together zones with identical watering properties.

Each Preconfigured Watering Schedule determines how long a group of zones will run and how the schedule should be modified based on your local weather. Zones will water only at your defined [Program Start Times](#).

To add a preconfigured watering schedule, navigate to the Zones & Schedules page in your Hydrowise account and click on Add Watering Schedule.

Schedule Name: Give the schedule a name.

Run Time: Choose how long each irrigation zone associated with this Preconfigured Watering Schedule will run.

Run Frequency: Choose how often each irrigation zone associated with this Preconfigured Watering Schedule will run.

Schedule Modification: Select how the watering schedule for this Preconfigured Watering Schedule is modified based on temperature and rainfall. Note: if you apply this watering schedule to a [Smart \(ET\) Watering](#) zone, the schedule modification is not used.

Viewing Preconfigured Watering Schedules

You can see all your preconfigured watering schedules on the Zones & Schedules page.

If your controllers are managed by a contractor, you may also see preconfigured watering schedules that your contractor has created. These will have a group symbol next to them as highlighted below. You can use these preconfigured watering schedules but you can't edit or delete them – only the contractor can do that.

Preconfigured Watering Schedules

Preconfigured Watering Schedules allow you to group together zones with identical watering properties. ⓘ

Fall Schedule

RUN TIME
10 mins

WATERING FREQUENCY
Every Program Start Time

SCHEDULE MODIFICATIONS
Water longer when hot

Summer Schedule

RUN TIME
15 mins

WATERING FREQUENCY
Every Program Start Time

SCHEDULE MODIFICATIONS
Water longer when hot

Add Watering Schedule

Copyright 2018 Hunter Industries. All Rights Reserved.

27

Account - Station Run Time and Frequency


If you choose to enter the time and frequency, the following fields are available:




Watering Length: The number of minutes this zone will run for each time.

Watering Frequency: Choose how often to water the zone. The most common is Every Program Start Time.

Schedule Adjustment: Choose how to adjust the watering time based on your weather triggers.

From the dashboard, follow the steps below:

1. Select "Zones and Schedules"
2. Select the  box for the station (zone) that you will need to edit.
3. Select "Next" in the zone details
4. Enter "watering length and/or frequency".
5. Select "OK" to save.

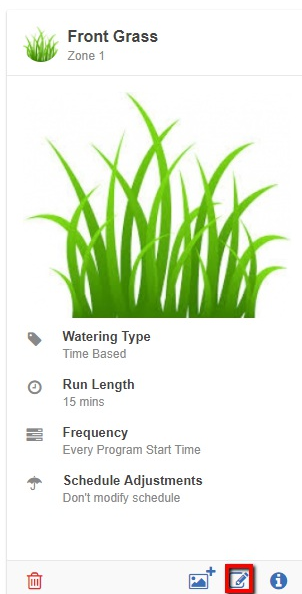



ist schedule based on temperature and rainfall



Zone Details ▶ **Time Based Schedule** ▶ **Cycle & Soak** ▶ **Advanced**

Watering Type

☒ Enter Time and Frequency below
☐ Use a Preconfigured Watering Schedule

Watering Length
The number of minutes this zone will run for each time

Watering Frequency
Choose how to often this zone should run

☒ Every Program Start Time ☐ Interval Based Watering

Schedule Adjustments
Choose how to adjust the watering time based on your weather triggers

Cancel


Configuring - Watering Start Times And Water Days

Watering Start Times are the specified times when your controller is permitted to water. Even if you have configured all your zones correctly, without Program Start Times no watering will occur.

We will now go over basic setup and explain how Program Start Times affect the watering schedule. If you haven't already set up your zones, refer to: [Configuring Irrigation Zones](#). Once you have configured your irrigation zones, you are ready to set up your Program Start Times.

Watering Start Time

Make sure you are logged in to your account. To add a Program Start Time, go to [Zones and Schedules](#). Scroll down to program start times and click **Add Watering Time**.

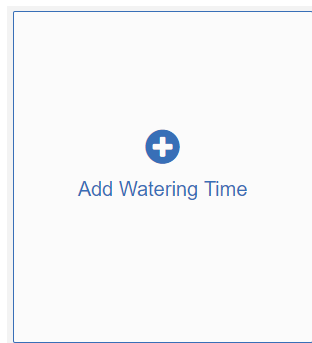

You will then be presented with the following selection box:

Set Time
Select Zones

START TIME
Enter the time for this Program Start Time

WATERING TYPE
Normal watering time (every week)

Normal watering is permitted to start at this time

WATERING DAYS
Select the days of the week to water

Selected Days of the week

S M T W T F S

Cancel
< Prev
Next >
OK

Watering Type Options:

Normal watering time (every week)	This watering time is used first when determining when the controller is permitted to run.
Watering even weeks only	This watering time is only used on even weeks. We use the ISO 8601 definition of even and odd weeks, where each week starts on a Monday. You can check if a particular date is on an even or odd week using an online tool . When watering on even weeks, you can choose to water on specific days of that week or only odd or even days of the week.
Watering odd weeks only	This watering time is only used on odd weeks. We use the ISO 8601 definition of even and odd weeks, where each week starts on a Monday. You can check if a particular date is on an even or odd week using an online tool . When watering on odd weeks, you can choose to water on specific days of that week or only odd or even days of the week.
Low priority water	Low-priority watering times are used when there are no Normal, Odd Week, or Even Week watering schedules available and a zone need to run. A low-priority watering time can be useful where you want the controller to insert extra watering cycles between your normal watering cycles on hot days. This watering type works in combination with How to Set Up "Water More Often When Hot."

Watering Day Options:

Select days of the week	<p>You can specify the days on which you want this program start time to be effective.</p> <p>Note: Blue means selected, so by default all days are selected. You can deselect a day by clicking on it and it will turn white.</p>
Even days	Will only allow this program start time to start on even days of the month
Odd days	Will only allow this program start time to start on odd days of the month

Depending on your options, this Program Start Time will be modified accordingly.

Next, you will need to select the zones for which this Program Start Time will be effective. You have two options:

Set Time
Select Zones

SELECT ZONES

Selected zones

Applies to all zones
Selected zones

Available zones
Selected zones

Zones
Zone 1
Zone 2
Zone 3
Zone 4
Zone 5
Zone 6

Cancel
< Prev
Next >
OK

Applies to all zones	This automatically applies the specified program start time to all zones. If you remove or add irrigation zones, they will automatically be applied to this program start time
Selected zones	This will only allow the selected zones to use this program start time. If you add more irrigation zones, you may be required to add them to this program start time if you want them to use this program start time.

An example of how Watering Start Times affect your watering:

This example will feature six irrigation zones: three set up for Smart Watering, and three set up for **Predictive Watering™**.

Zone 1 Zone Number - 1	Zone 2 Zone Number - 2	Zone 3 Zone Number - 3
Watering Type Smart Watering	Watering Type Smart Watering	Watering Type Smart Watering
Peak Watering Frequency Every 5 days	Peak Watering Frequency Every 5 days	Peak Watering Frequency Every 5 days
Schedule Adjustments Waters when estimated moisture level reaches 0%	Schedule Adjustments Waters when estimated moisture level reaches 0%	Schedule Adjustments Waters when estimated moisture level reaches 0%
Run Length 9 mins	Run Length 9 mins	Run Length 9 mins

Zone 4 Zone Number - 4	Zone 5 Zone Number - 5	Zone 6 Zone Number - 6
Watering Type Time Based (Water more often when hot)	Watering Type Time Based (Water more often when hot)	Watering Type Time Based (Water more often when hot)
Frequency Twice a day	Frequency Twice a day	Frequency Twice a day
Schedule Adjustments Water more often when hot	Schedule Adjustments Water more often when hot	Schedule Adjustments Water more often when hot
Run Length 5 mins	Run Length 5 mins	Run Length 5 mins

There will also be six Program Start Times. You will learn how each works below.


08:00	08:00	15:00
TYPE Selected days of week S N M T W TH F S	TYPE Selected days of week S N M T W TH F S	TYPE Selected days of week S N M T W TH F S
ZONES Zone 4 Zone 5 Zone 6	ZONES Zone 1 Zone 2 Zone 3	ZONES Zone 4 Zone 5 Zone 6

15:00	22:00	22:00
TYPE Selected days of week S N M T W TH F S	TYPE Selected days of week S N M T W TH F S	TYPE Selected days of week S N M T W TH F S
ZONES Zone 1 Zone 2 Zone 3	ZONES Zone 4 Zone 5 Zone 6	ZONES Zone 1 Zone 2 Zone 3

We want the zones that are using Smart Watering to water every possible day since they use predictive rain data to schedule their next watering time. **Predictive Watering™** is set to water only on the weekends.

The watering schedule (Reports > Watering Schedule) is reflected below. You will notice that all **Predictive Watering™** has been scheduled on weekends, and that all **Smart Watering** schedules appear if they are scheduled to run within the next three days.

IMPORTANT: The setup of your Smart Watering Zones will affect how often they are scheduled to run. You can also check the schedule for any zone by accessing your [Dashboard](#) and clicking on a zone.

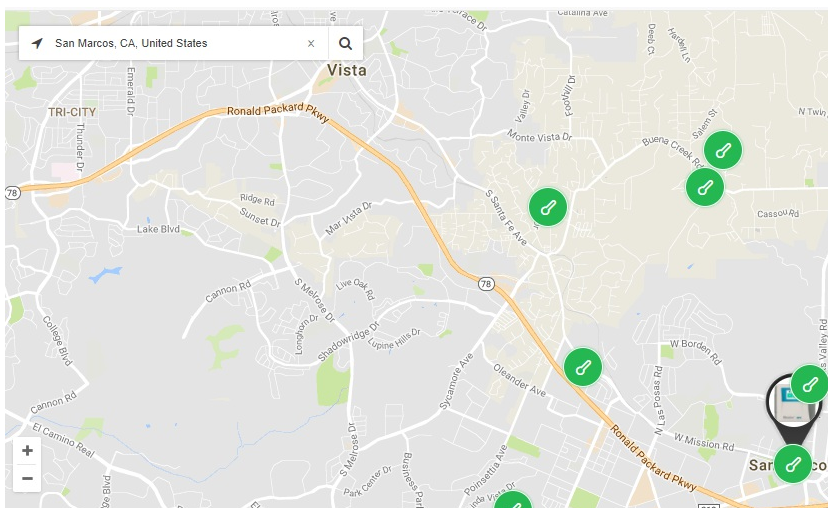

IMPORTANT: Make sure you enter enough information to find your address. There are lots of towns around the world with the same name.

Using Google Maps, we will resolve your location and display local weather stations. Your watering schedule will be based on this location and will be used to decide when to suspend watering (due to low forecast temperature) or water more (due to high temperature).

IMPORTANT: If you have an Enthusiast Plan or higher, you can choose up to five personal or airport weather stations. Otherwise, you will only be able to choose one airport station (shown in **purple**).

Once we have your location, we will display a map showing the closest weather stations to you. Up to 15 weather stations will be displayed. Icons are color coded based upon the key below. Here is an example:

Click on the most relevant weather station(s). To start using a station, press the **Select** button.

Information from the weather station(s) is used to determine whether to suspend watering (due to high local rainfall for the day or week) or water more (due to high current temperature).

If you have an Enthusiast Plan or higher, we recommend that you select three or more weather stations in your area to average out abnormalities in individual weather stations.

Account - Watering Triggers

You can configure watering triggers for either **Time-Based Predictive Watering™** or **Smart Watering**.
To configure your predictive watering triggers, click on **Watering Triggers**.

triggers for Time-Based Predictive Watering™

Below is a quick reference chart for the basics of each trigger.

Trigger	What happens	Extra Requirements
Don't Modify Schedule	Waters regardless of triggers set	N/A
Water more often when hot	Will water an additional cycle	Extra start time required in water days section
Water longer when hot	Waters longer by a % set in triggers	Variable watering needs to be set
Don't water extra when hot	No extra watering but suspends zone based on other triggers	Rain fall and predictive triggers need to be set

Time Based Watering Adjustments

For time based watering zones, you can adjust how often and how long your Hunter controller waters your each zone. control when your controller should suspend watering or water extra.

Suspend via Predictive Watering™ ⓘ

Don't water when today's forecast temperature is less than

ON

60 F

0 F

130 F

Don't water when the chance of rain is higher than

ON

80 %

0%

100%

Don't water when forecast wind speed ⓘ is higher than

OFF

0 m/h

0 m/h

100 m/h

Suspend Watering via Weather Station Measurements ⓘ

Don't water when yesterday's rainfall is higher than

ON

0.15 in

0 in

5 in

Don't water when the last 7 days rainfall is higher than

ON

3 in

0 in

5 in

Variable Watering ⓘ

Water 30 % less when today's forecast temperature is less than

ON

75 F

0 F

130 F

Water 100 % more when today's forecast temperature is above

OFF

90 F

0 F

130 F

and today's forecast humidity is below

OFF

0 %

0%

100%

You can suspend watering based on either forecast or actual weather data. You can also vary the amount of watering according to the forecast temperature.

Suspend Watering – Weather Forecasts

Forecast Temperature	Choose to suspend watering when the forecast temperature is less than the specified amount.
Forecast Rainfall	Choose to suspend watering when the forecast rainfall is higher than the specified amount.
Forecast Wind Speed	Choose to suspend watering when the forecast wind speed is higher than the specified amount.

Suspend Watering – Weather Station Measurements

Actual Rainfall 24 hr	Choose to suspend watering when the rainfall over the past 24 hours is higher than the specified amount.
Actual Rainfall 7 days	Choose to suspend watering when the rainfall over the past 7 days is higher than the specified amount.

Copyright 2018 Hunter Industries. All Rights Reserved.

34

Variable Watering

Water Less	Choose to water a certain percentage less when the temperature forecast is less than the specified amount. Note: To change the watering percentage, click on the number next to the % sign.
Water More	Choose to water a certain percentage more when the forecast temperature is higher than the specified amount and the humidity forecast is below the specified amount. Note: To change the watering percentage, click on the number next to the % sign.

Triggers for Smart (ET) Watering

Using forecast evapotranspiration helps to predict the right watering schedule for your zones, giving you a more accurate picture of when the zones will next run.

You can choose whether to use the forecast temperature to predict smart (ET) watering, and whether to use forecast rainfall to delay smart (ET) watering. Watering Schedules will be estimated up to 30 days from today based on forecast and historical temperatures and rainfall. The predicted schedules will be progressively updated each day based on actual weather conditions and new forecasts.

Your watering schedule is updated based on actual weather conditions shortly before your first Program Start Time each day.


You can view the watering adjustments for Smart Watering by clicking [here](#).

For more information on how Time Based Watering works compared to Smart Watering please check out our video guide [here](#).

Account - Alerts

In this section, we will cover how alerts work and a description of each of the alerts.

To access your **Alerts** from your browser, click on **Settings** which is located on the top right of your **Dashboard**:

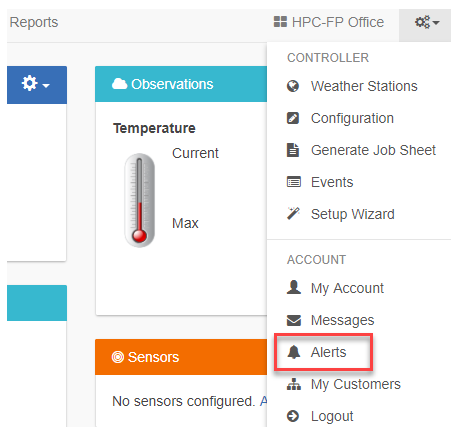

From your mobile device application, click on **More**. Then click on **Alerts** (scroll down, if needed).

Understanding what each alert does:

Below is a list of different alerts and information about what each alert means.

Alert	Description
High water usage for zone	Zone's water usage rate is higher than the previous time this zone ran.
Low water usage for zone	Zone's water usage rate is lower than the previous time this zone ran.
High water usage with no zone running	High water usage detected when no zones are active.

High water usage over the last hour with no zones running	Water usage over the last hour when no zones are active is greater than your trigger.
Interrupted water usage at any time	Water usage at any time is less than your trigger (averaged over 15 min).
Interrupted water usage over last hour	Water usage over the last hour is less than your trigger.
Wiring short (high current) to your solenoid	High solenoid current caused by faulty wiring or faulty solenoid valve.
Broken wire to your solenoid	No solenoid current caused by broken wiring or nonexistent solenoid valve.


How each alert works:

Alert	How it works
High water usage for zone	If a zone has a water rate higher than the previous time it was scheduled and no changes have been made to the watering length, you can set a % to give you an alert (as there might be a leak somewhere when this zone runs).
Low water usage for zone	This alerts works similar to the above. However, alerts for low water usage advise you if there is a blockage or a potential leak minimizing the water output through the solenoid.
High water usage with no zone running	This will notify you if water flow is being measured while no zone is active. If you use this alert, make sure you make room for residual water that can pass back and forth through your flow meter, which can give false alerts. We recommend setting this between 5-10 liters.
High water usage over the last hour with no zones running	This measures slow water leaks that occur over a period of one hour, so you can be notified if a zone has been leaking "x" amount of water in the last hour.
Interrupted water usage at any time	A threshold can be set in liters. If usage falls below the threshold, an alert is triggered.
Interrupted water usage over last hour	This alert works similar to the above alert, but the difference is that it measures usage hourly. Note: This alert is useful if you expect to have water flow every hour.
Wiring short (high current) to your solenoid	On average, a solenoid can use 200-400 mAh. If you have a master valve, this value can change to 300-500 mAh. You will receive an alert if our controller measures a spike, as there could be a fault in wiring or the solenoid itself.
Broken wire to your solenoid	This alert is triggered when no current is measured when a zone runs.

NOTE: The low-current alert is generated after the zone stops watering (i.e., we wait for the entire cycle to see if there is any current). The high-current alert stops the zone at the end of the (aborted) cycle. The same is true for water-usage alerts (we check water usage at the end of the cycle against the previous time the zone ran).

Account - Controller Configuration

To change the configuration of your controller, select **Configuration** from the menu in the top right hand corner.

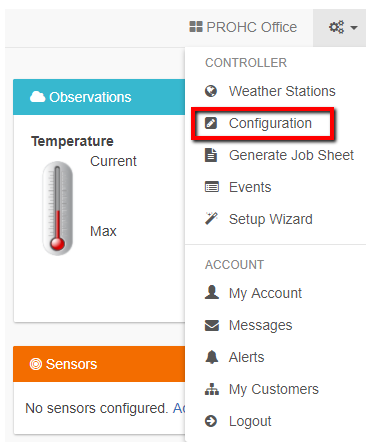

Controller Settings

Some configuration options include –

Controller Name: The name of your controller

Serial Number: The controller's serial number. Click 'Remove Serial' to remove the serial number and replace it with another physical controller

Notification Email: The email address notifications are sent to when the controller is offline, or Hydrowise needs to contact you (for example when your subscription plan is about to end)

Notify: The amount of time that your controller is offline for before we notify you

Units: The units used for reports, alerts and elsewhere in the app

Inter Zone Delay: The number of seconds to insert between each zone watering when calculating scheduled

Master Valve Delay: The minimum number of seconds that the master valve should be active before any zone starts

Hide password: If set to yes, this will hide your wireless password on the controller. If your controller is in a publicly accessible area we recommend you hide your password.

Controller Settings for My Controller

CONTROLLER

NAME

Hunter Industries

SERIAL NUMBER

virt4563 [Remove Serial](#)

STATUS

Linked

MODEL

HC 6 Zone Controller

INSTALL DATE

Mon, 19 Sep 16 02:07:37 +0000

SOFTWARE

OFFLINE NOTIFICATIONS

NOTIFICATION EMAIL

anthony+4@hydrowise.com

NOTIFY

After no contact for 1 day

REGIONAL SETTINGS

TIMEZONE

America/Los_Angeles

INTERNET SETTINGS

OFFLINE MODE

HIDE WIFI PASSWORD

No

DISABLE LOCAL ACCESS

No

VALVE DELAYS

INTER ZONE DELAY

0 seconds

MASTER VALVE DELAY


3 seconds

Expansion Modules

Here you can see your expansion modules and when they last made contact. You can also add or remove expansion modules. Up to 2 expansion modules can be added to a single Hunter HC controller.

Copyright 2018 Hunter Industries. All Rights Reserved.

37

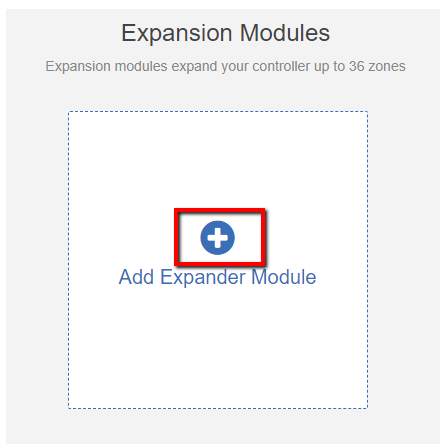

When you add an expansion module you will need to give it a name and specify the ID number that you selected when setting up the module.

Edit an expansion module

Expansion Module Name

This is a name for the expansion module

Expander ID

1

Each expander module has a selectable ID between 1 and 5. This must match the ID selected on the expander unit.

Cancel

OK

Offline Water Adjustments


Offline water adjustments allow the controller to automatically adjust the amount of watering on a month- by-month basis if the controller is in an Offline mode (ie. if is not connected to the internet).


□

Account - Account Details

Account Details

Here you can change your password, change your plan and change your account visibility settings. By default, nobody else can see your account. However, if you want help from a Hydrawise contractor then you can choose to make your account visible to the contractor so that they can help you with configuration or troubleshooting.

1. Click the three gear settings icon  in the top right hand corner to view "My Account".

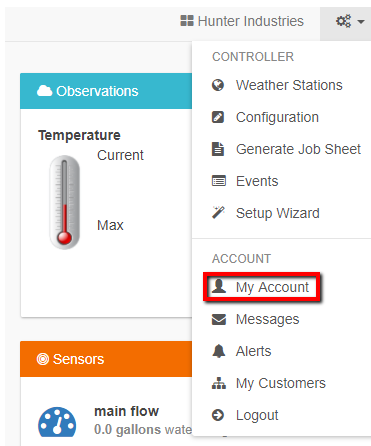

You can view/edit the following in this section:

1. **User Settings**
2. **Account Settings**
3. **Plan Details**
4. **Privacy settings**

My Account Details


Check and edit user account information, including password, plans and contractors

<h3>USER SETTINGS</h3> <div style="display: flex; justify-content: space-between;"> <div> <p>UNITS OF MEASUREMENT Fahrenheit & Inches</p> <p>LANGUAGE English</p> </div> <div style="text-align: center;"> <p>Brendan brendan.proffitt@hunterindustries.com</p> </div> </div> <p style="text-align: right;">Edit</p>	<h3>ACCOUNT SETTINGS</h3> <p>API KEY D51A-6EB2-531F-3AEE Generate API Key</p> <p>NOTIFICATION EMAIL contractor@hydrawise.com</p> <p style="text-align: right;">Edit</p>
<h3>PLAN DETAILS</h3> <p>PLAN TYPE Contractor (expires on Tue 19 May 2020)</p> <p>IMAGE STORAGE 6.7MB of 10.0MB</p> <p>FILE STORAGE 0.3MB of 100.0MB</p> <p>SMS ALERTS Sent 0 SMS in last 30 days</p> <p>CONTROLLERS 11 controller configured out of a maximum of 50 controllers</p> <p style="text-align: right;">Edit</p>	<h3>PRIVACY SETTINGS</h3> <p>You are on a contractor plan and this is how your contact details appear to your customers</p> <div style="border: 1px solid #ccc; padding: 10px; margin-top: 10px;"> <p>Hydrawise Contractor Hydrawise Smart Controller and Water Management Software - Get more control from your sprinkler system.</p> <div style="display: flex; justify-content: space-between;"> <div style="text-align: center;"> </div> <div> <p>CONTACT DETAILS contractor@hydrawise.com</p> <p>ADDRESS San Marcos</p> <p>WEBSITE http://hydrawise.com</p> </div> </div> </div> <p style="text-align: right;">Edit</p>

User Settings

From this screen, you can change the following: Name of user, email address, picture of user, change the units of measurement and edit password.

Edit User



Change picture

Name

Email Address

Units of Measurement

Fahrenheit & Inches

Change Password

Cancel

OK

Account Settings

From this screen, you can change the following: choose the user that notifications for account issues should be sent to.

Edit Notification Email

Accounts

Choose the user that notifications for account issues should be sent to

Cancel

OK

Plan Details

From this screen, you can view the plan type, image storage, file storage, SMS alerts, and controller amount. You can **edit** the following: change or upgrade plan.

Choose Your Subscription Plan

☒ Home Owner Plans
☐ Contractor Professional Plans

The Hydrawise system is free for most users worldwide. For those interested in even more w the Enthusiast Plan provides access to more than 100,000 personal, airport and official weatl

Home	Enthusiast
<div>Free</div> <ul style="list-style-type: none"> ✓ Select from over 10,000 Airport Weather Stations ✓ Monitor 1 Weather Station Simultaneously ✓ Daily Schedule Updates 	<ul style="list-style-type: none"> ✓ Select from c and Personal ✓ Monitor up to Simultaneous ✓ Hourly Schec

Privacy settings

From this screen, you can view the contact details, address, and website. You can **edit** the following:

1. Search and select a contractor you want to manage your controller.

Contractor Selection

Filter by radius


☒ 30kms
☐ 80kms
☐ 160kms

2. Make your account private if previously managed by a contractor.

Contractor Selection

Filter by radius ☒ 30kms ☐ 80kms ☐ 160kms

Here are the closest 6 Hydrowise contractors to you based on your z

**Proffitt Construction** (Your Contractor)

CONTACT
760-304-7218

LOCATION
1943 Diamond Street, San Marcos, CA, United States

MAKE ACCOUNT PRIVATE

Account - Dashboard View


There are a number of ways to keep an eye on your controller, including the dashboard, reports, and configuration.


Controller Dashboard


From the controller dashboard you can:


1. Find **zone information** and start, stop, and suspend zones
2. See **temperature** and **rainfall** observations
3. See the **weather forecast**
4. See and **add sensors**
5. See your **controller's status**
6. View a different **controller**


Watering Schedule for Carioca Court


Front Grass





Street Drip


Front Drip



Back Grass



Back Drip

Forecast

Thursday	Friday	Saturday
 77 F Partly Cloudy 0% 49% 11 m/h	 70 F Partly Cloudy 10% 67% 14 m/h	 70 F Clear 0% 68% 13 m/h

Observations


Temperature
Current

Max

Rainfall
Yesterday
Last Week


Sensors

No sensors configured. [Add a sensor](#)

Controller Status


Status

All good!

Water Saving
0%

Watering Time (week)
715 mins

Zone Information

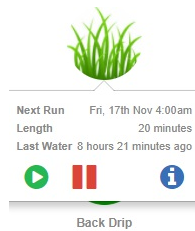All your configured zones are listed here. To find more information about a zone, click on the zone.



This will show when the zone is next scheduled to run and for how long, and when it last ran.

To run a zone, click the **Play** button. You will be prompted to run the zone for its normal watering time or to choose a custom time.

Manually Start a Zone ×

How long would you like to run **Front Grass** for?

Normal length Custom length ⚙️

Run Front Grass for its normal watering length

Run now

Cancel

To suspend a zone, click the ⚙️ button, then **suspend all zones**. You will be prompted to choose when the suspension should end. Once a zone is suspended it will display in a lighter color on the dashboard and you can click the Pause button again to remove the suspension.

Suspend a Zone ×

How long would you like to suspend **all zones** for?

📅 Until the end of Thursday November 16 2017 ▼

Remove Suspension Cancel **Suspend**

To display zone information, click the ℹ️ button after hovering over the zone. This will display information including the next watering time, watering frequency and program start times.

The icon on the dashboard can be changed to display a picture of your irrigation zone.

Zone Information ×

Images IMG_5424.JPG 📎 🗑️

Next watering cycle Front Grass will next run on Friday, 17th November 4:00am for 20 minutes. Normal watering cycle

Watering frequency

Program start times This zone is permitted to water at the following times:
Monday, Tuesday, Wednesday, Thursday, Friday at 04:00h

Date & Time	Run Time (mins)	Watering Status
Thu 16th November @ 4:00am	20 minutes	Normal watering cycle
Fri 17th November @ 4:00am	20 minutes	Normal watering cycle

Previous **1** Next

OK

Temperature and Rainfall

All temperature and rainfall values are calculated as the median of your weather stations. For example, if you are subscribed to 3 weather stations, the temperature or rainfall will be the middle value. If you are subscribed to 4 weather stations it will be halfway between the two middle values.

- **weather stations:**
 - If your weather stations record maximum temperatures of 45, 48 and 56 degrees, the median will be 48 degrees.
- **weather stations:**
 - If your weather stations record maximum temperatures of 70, 75, 77 and 80 degrees, the median will be 76

If your temperature or rainfall readings are consistently showing a low value, go to Reports and check each weather station rainfall or temperature and adjust them accordingly.

Temperature

For customers on an Enthusiast plan this will show the current and maximum temperatures for today. This is based on the median value of all the weather stations you have selected.

Rainfall

This panel will show you the amount of rain which fell yesterday and in the past week. This is based on the median value of all the weather stations you have selected.

If you have an Enthusiast plan, instead of yesterday's rainfall you will see rainfall for the past 24 hours.

Forecast

This area will show forecast temperature and weather conditions, including the percentage chance of rainfall, expected humidity, and expected average wind speed.

Sensors


This area will show any [sensors](#) you have configured and will also allow you to add a sensor.

Controller Status

This area will display the status of your controller. If the controller is online you will see a green circle with a tick, and you can hover over this to see the last time the controller was synchronized. If the controller has been offline for 30 minutes or more then you will see a red triangle with an exclamation mark. If your controller remains offline for 24 hours we will send you an email.

Account - Changing Current Controller

From the menu, choose the **Controller link** in the top right.

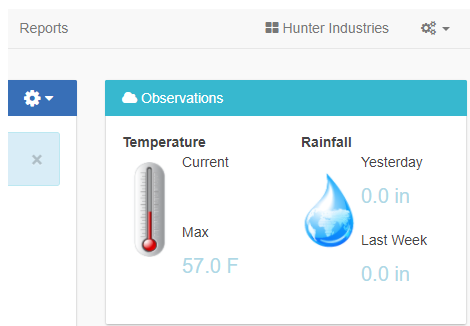





This will give you a list of all the controllers in your account. Click on the controller name to change to configuring that controller.



Choose the **controller** you want to view.



Choose your controller ×

Q


Golf Room 


PI 



1943 Diamond st 



1943 Engineering 


Account - Assigning Images on Mobile

Before assigning the image to an individual zone with your mobile device, please make sure it is captured in the correct orientation (landscape) mode as seen in the illustration below:



From the "zones section", you can assign an image to each zone. Click on the Image Add button  next to the Zone Edit button at the bottom right.

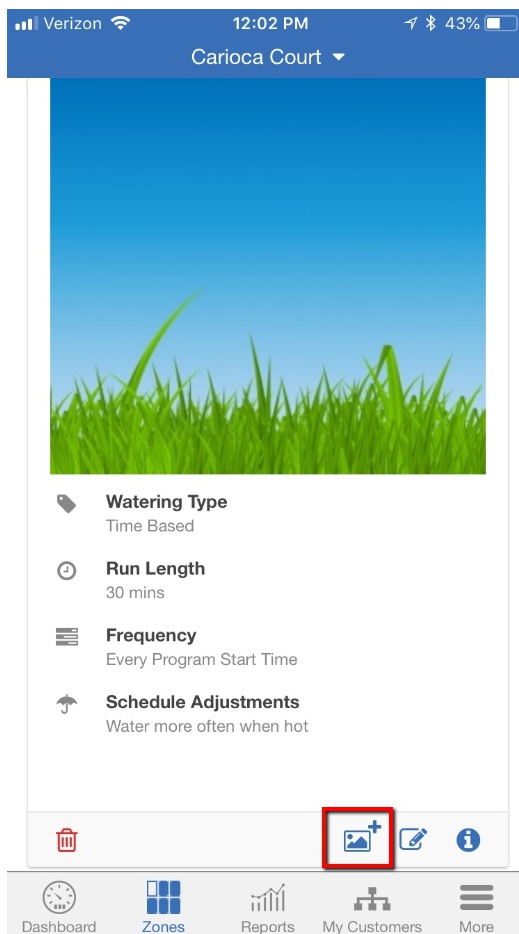

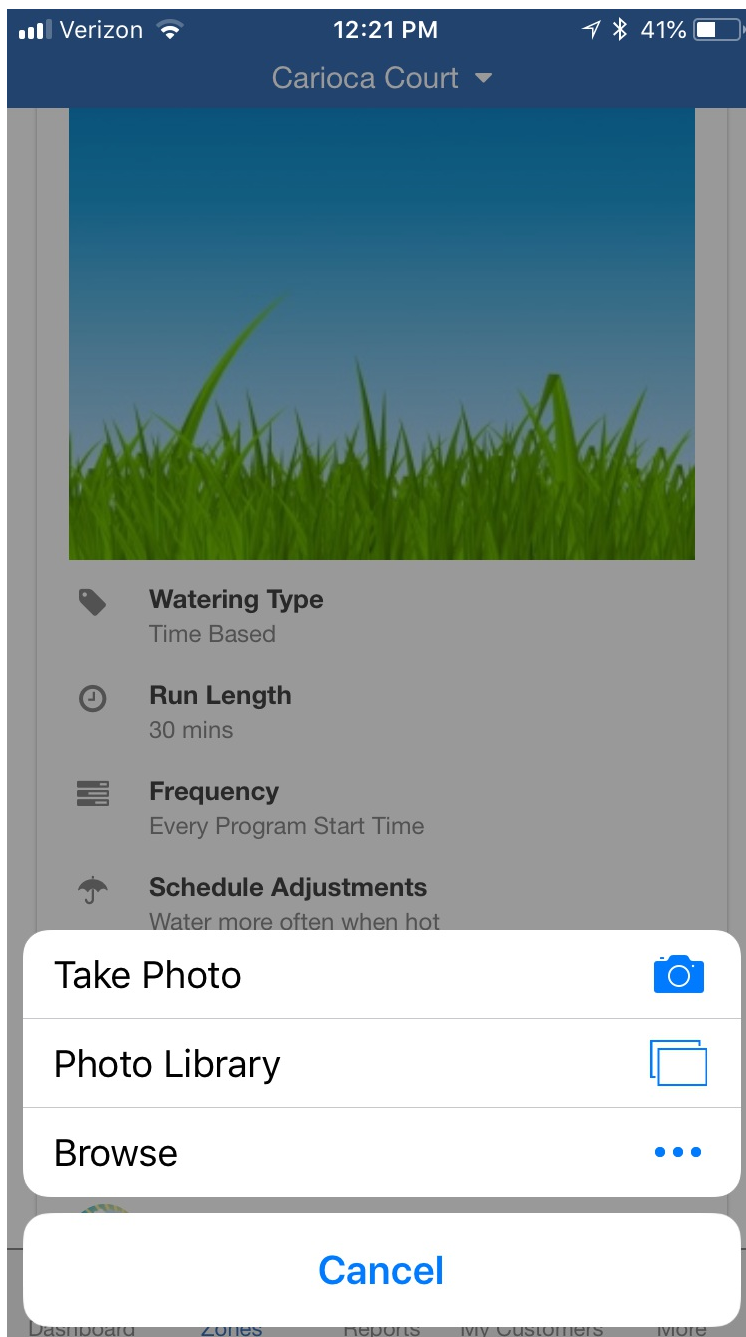

You can **upload** multiple images per zone or take a photo using phone camera. The total number of images that can be uploaded is based on the images size and is different for each account's Plan Subscription.

After an image is uploaded you can select an image to be displayed on the Dashboard by editing the zone [🔗](#) and selecting the image in the Zone Icon list.

Verizon 12:08 PM 42%

Back Edit Zone

Zone Details ▾








Zone Name
Assign a name for this irrigation zone






Front Grass

Zone Number
Choose the zone number that this zone is wired to on your Hunter controller

Zone 1 ▾

Zone Icon
Choose the icon you want to see on the dashboard for this zone








Watering Type

☒ Time Based Schedule
 ☐ Smart (ET) Schedule

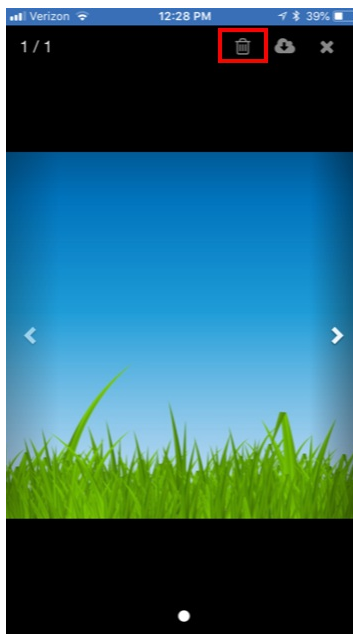Water at a specified frequency (eg. every 1 week) and adjust schedule based on temperature and rainfall


To **REMOVE** the image, you can click on the image in the "zones" settings and the following screen will appear. The existing image can be deleted and new one added on the upper right-hand side.




Account - System Shut Off

In the application (Smart Device or PC), you can suspend your system for any period of time for winterization purposes or basic system shut down. For information on winterizing with a HC flow meter installed, [CLICK HERE](#).


First, **CLICK** on the gear above the zones.

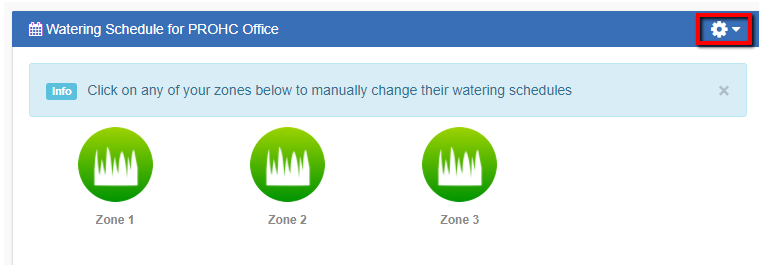


Next, **CLICK** "Suspend all zones."

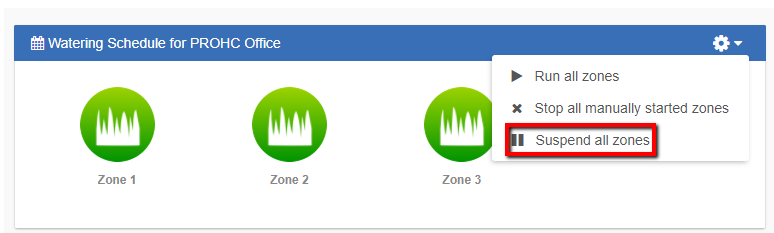


Select the date range for which you would like the controller to be suspended. Use the arrow in the gray drop-down box to select a day and month. Once the date is selected, **CLICK** suspend.

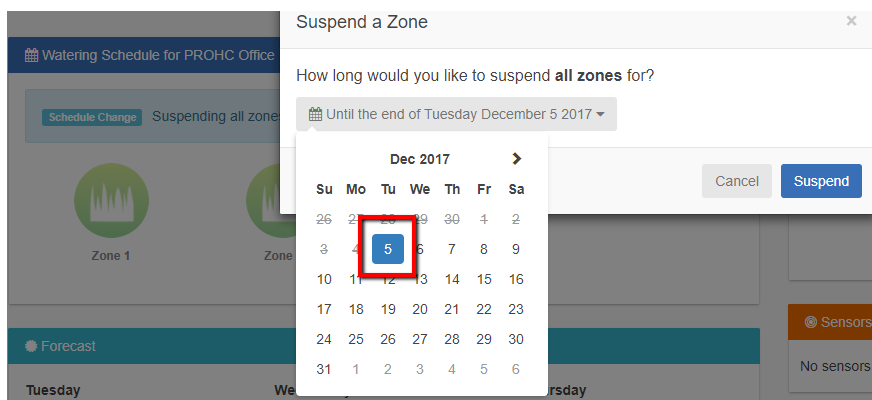

Your zones should all appear faded and you will get the following message: **"All zones suspended for XX months."** This message will disappear after a few minutes.

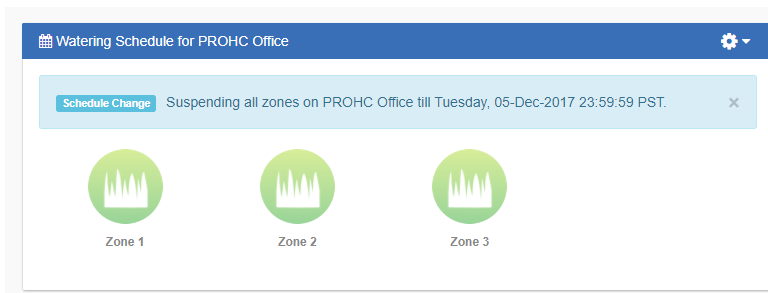


If you wish to restart your system before the due date, **CLICK** the single gear above your zones, and **CLICK** "Suspend all zones." Then, **CLICK** "Remove suspension" in RED. The suspension will be removed and the system will be ready for watering.

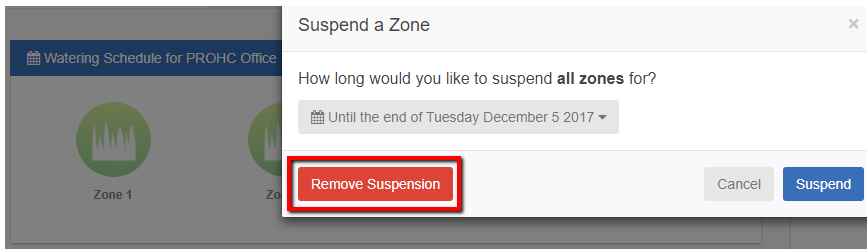


Account - Delete Controller

If you have the need to delete a controller from your account, please see the following steps:


1. Click on the top right three gears to access your **my account** settings.
2. Choose the controller that needs to be removed in **my controllers** section.
3. Click on the **three dots** to the right of the controller name.
4. Choose **delete** to remove controller from the account.

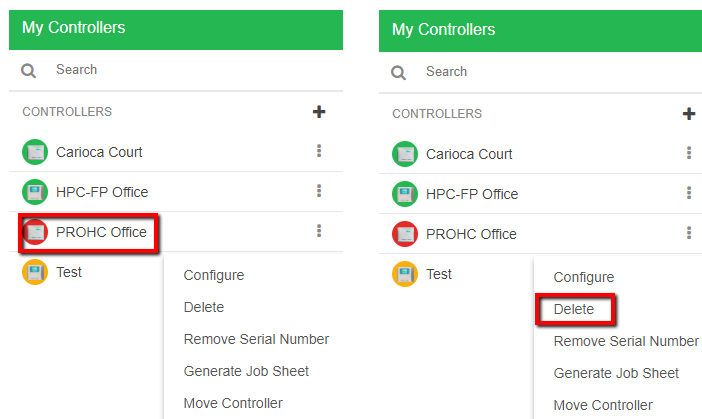

NOTE: Please make sure you are not currently configuring the controller that you want to delete, otherwise the message below will appear.

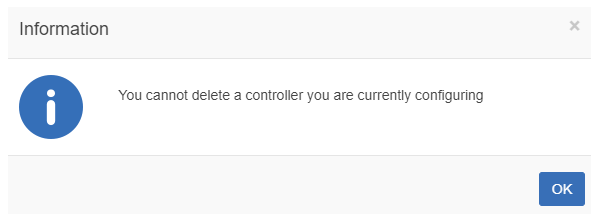


To check on the current controller that is being configured, see the controller name in the upper right of the dashboard.

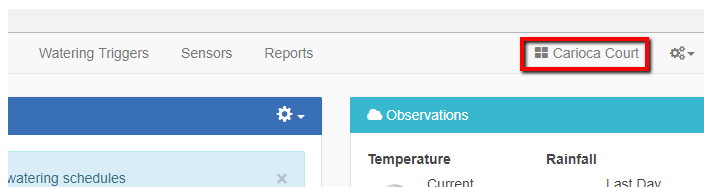

Alerts - Auto suspend for high flow


This action for the alert "**High water usage for a zone**" allows the user to automatically suspend the zone a number of days/weeks when high flow is detected. This will allow the time in the field to make all repairs necessary. To learn more about alerts, click [here](#).

Please view the steps to access this action:

Click on **Settings**  icon and scroll down to select "**Alerts.**"

1. Click on " **Add New Alert.**"
2. Choose "**Alert Name, Type and percentage**" then click "**next.**"
3. Choose from drop down to apply to all "**controllers/sensors**" or only "**selected ones.**"
4. Under actions, select "**suspend the zone,**" and number of "**days**" to be suspended, then click "**ok.**"

NOTE: Max suspension is unlimited for days and weeks.



Alerts

Alerts allow you to be notified of potential issues with your controller wiring, valves, pipes or Hunter controller



Add new alert

Step 2

Edit Alert



Alert Name ▸ Applies To ▸ Actions

Alert Name

High Flow Alert - Suspend

Alert Type

High water usage for a zone ▾

Zone's water usage rate is higher than the previous time this zone ran

15



%

Cancel

< Prev

Next >

✓ OK

Step 3

Edit Alert



Alert Name ▸ Applies To ▸ Actions

Applies To

Applies to all controllers, sensors ▾

Cancel

< Prev

Next >

✓ OK

Step 4

Step 2

Zone Details ▸ Virtual Solar Sync ▸ Cycle & Soak ▸ Advanced

Watering Type

☒ Enter Time and Frequency below
☐ Use a Preconfigured Watering Schedule

Watering Length

The number of minutes this zone will run for each time

30 minutes

Watering Frequency

Choose how often this zone should run

☒ Every Program Start Time ☐ Interval Based Watering

Predictive Watering™

Adjust watering based on the following triggers ⓘ

⚙ Don't water when:

<input checked="" type="checkbox"/> Forecast below 60°F	<input checked="" type="checkbox"/> Wind above 9mph
<input checked="" type="checkbox"/> 80%+ chance of rain	<input checked="" type="checkbox"/> 0.1in+ rainfall last day
<input checked="" type="checkbox"/> 3in+ rainfall last 7 days	

Cancel < Prev **Next >** ✓ OK

Step 3

Zone Details ▸ Virtual Solar Sync ▸ Cycle & Soak ▸ Advanced

Cycle & Soak

Cycle and soak reduces runoff from each zone by pausing an irrigation cycle ⓘ

☒ Do not enable cycle and soak
☐ Enable cycle and soak

Cancel < Prev **Next >** ✓ OK

Step 4

Zone Details ▸ Virtual Solar Sync ▸ Cycle & Soak ▸ Advanced

Water Adjustment

Fine tune your watering if your zone appears to be too dry or wet

Water less **Normal** Water more

Water for normal watering length

Cancel < Prev **Next >** ✓ OK

After Virtual Solar Sync has been installed and programmed, it is recommended to allow the system to run for a few days at the initial setting. Because of the variety in site conditions, the initial setting may require adjustment in order to achieve the desired performance.

Virtual Solar Sync and Pre-configured Watering Schedule Note:

In order to have this in the option when in Virtual Solar Sync, you must first have a pre-configured schedule assigned in the account. The drop down here will not display any schedule without completing the necessary steps found in the article [here](#) or simply click **CREATE NEW** as shown in the section below.

Pre-configured Watering Schedule Drop Down

Zone DetailsVirtual Solar SyncCycle & SoakAdvanced

Watering Type

Enter Time and Frequency below

Use a Preconfigured Watering Schedule

Watering Schedule

Choose the Watering Schedule that this zone will use, or create a new one

Click the button below to create a new one

Create New...

Cancel


< Prev


Next >


OK

Account - Units of Measurement

For information on changing the units of measurement for your area, please see the steps below:

1. Select the three gears on the upper right on the dashboard.
2. Click "My Account"
3. Click the  icon in the user settings box.
4. Scroll down to choose the correct units of measurement. Screenshots below:

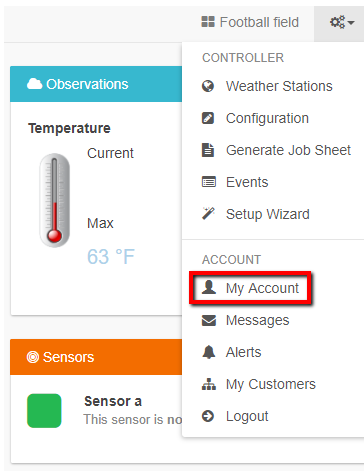
A screenshot of a dashboard interface. On the left, there are three main sections: 'Observations' (showing a thermometer and '63 °F'), 'Sensors' (showing 'Sensor a' with a status message), and a 'Football field' header with a gear icon. On the right, a menu is open, listing various options under 'CONTROLLER' and 'ACCOUNT'. The 'My Account' option under the 'ACCOUNT' section is highlighted with a red rectangle.

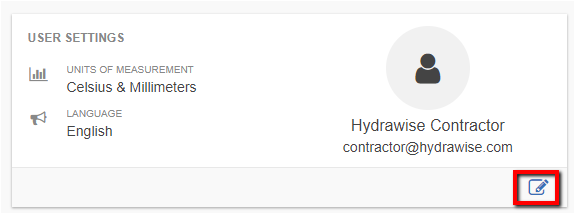A screenshot of the 'USER SETTINGS' page. It displays two settings: 'UNITS OF MEASUREMENT' set to 'Celsius & Millimeters' and 'LANGUAGE' set to 'English'. To the right, there is a user profile card for 'Hydrawise Contractor' with the email 'contractor@hydrawise.com'. At the bottom right of the settings area, there is a small icon of a document with a pencil, which is highlighted with a red rectangle.

Copyright 2018 Hunter Industries. All Rights Reserved.

54

Edit User



Change picture

Name

Hydrawise Contractor

Email Address

contractor@hydrawise.com

Units of Measurement

Celsius & Millimeters

Language

English

Change Password


Cancel


OK


Account - Link to Contractor

If you have a contractor in your area where you would like them to manage or view your controller settings when necessary, please follow the steps below:

1. Click on **My Account**.

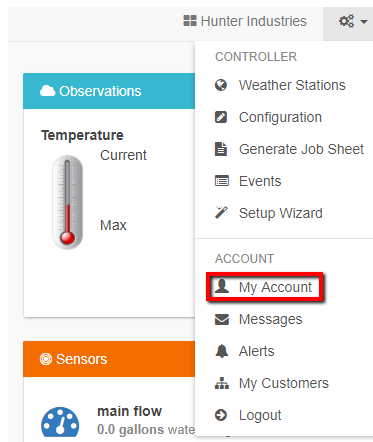

2. Click on  icon and you can select.



3. You will now have the option to **search** and **select** a contractor in your area filtered by the radius selected.

Contractor Selection

Filter by radius ☒ 30kms ☐ 80kms ☐ 160kms

Here are the closest 6 Hydrowise contractors to you based on your ac

jp lawn& landscaping

CONTACT

LOCATION
peekskill ny

CONTRACTOR STARTER

Account - Cycle/Soak Operation

The **Cycle and Soak** feature allows the user to split each station's run time into more usable, shorter duration watering. This feature is particularly applicable for slopes and tight soil (such as clay) because Cycle and Soak will help prevent excessive run off. You should enter the Cycle time as a fraction of the station's watering time and the Soak time as the minimum soak required before watering the next portion. The total number of cycles is determined by taking the total programmed station run time and dividing it by the Cycle time.

- **Cycle Time** is the maximum number of minutes for which the zone can run at a time.
- **Soak Time** is the minimum time between zone watering to allow water to soak into the soil.


For example: Suppose Station 1 required 20 minutes worth of water but after only 5 minutes, runoff occurred. However, after 10 minutes all the water was absorbed. The solution would be to program 20 minutes for the Station Run Time, 5 minutes for the Cycle time, and 10 minutes for the Soak. Station 1 will then water for 5 minutes and then the rest of the stations in the program will water. After all the other stations have watered the controller will check to see if Station 1 had soaked for at least 10 minutes. If it had, then Station 1 will water for another 5 minutes. This process would continue to repeat itself until Station 1 watered 4 times for 5 minutes each time, a total of 20 minutes.


Note: To test Cycle and Soak, you will need to have a scheduled run for automatic because running a zone manually from the app does not allow Cycle and Soak to take effect.


Important Offline: If your controller goes offline, your default watering schedule will still run, but Cycle and Soak will not work. Each zone will water its full length while offline.

Account - Account Name Edit

To rename an account, you will need to click on **Settings > My Account**, located on the top right of the **Dashboard** as shown below.

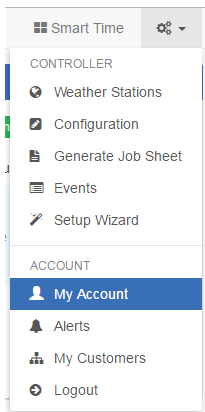


Once you are in **My Account**, click on the  icon near the **User Settings** field.

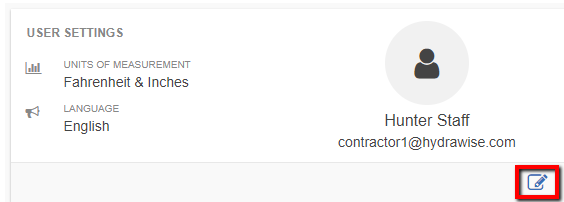

Enter the new **NAME** desired shown in the box below:

Edit User



Change picture

Name

Email Address

Units of Measurement

Change Password


Cancel

OK

NOTE: The default account name is your login name until you change it to be something else.

Account - Rename Controller

To rename your controller, you'll need to click on **Settings > Configuration**, located on the top right of the Dashboard as shown below.

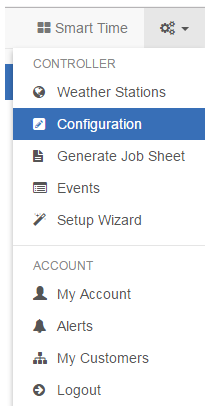

Once the configuration screen has loaded, click on the **Pencil** icon to edit the name.

CONTROLLER	
NAME	Hunter Industries
SERIAL NUMBER	virt4563 Remove Serial
STATUS	Linked
MODEL	HC 6 Zone Controller
INSTALL DATE	Mon, 19 Sep 16 02:07:37 +0000
SOFTWARE	



When you have entered the new name for your controller, click **OK**.

Edit Controller Settings ×

Name

Model
HC 6 Zone Controller [Change](#)

Cancel ✓OK


You have now renamed your controller.

Account - Add User/Files


Add User

Both contractors and homeowners can add additional users to an account. However, as a home user, you must have an Enthusiast Plan to add additional users.

To add a user, click on **Settings > My Account**.

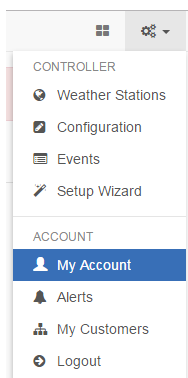


Next, scroll down to **My Account Users** and click **Add User**.

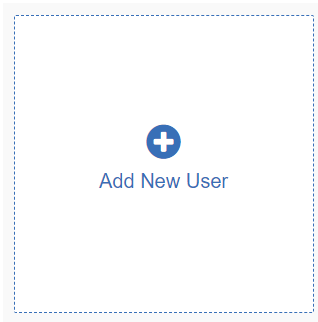

Fill in the required details and click **Create**. This will send a validation email to the user to activate the account. The user must create a password upon visiting the Dashboard for the first time.

Add User



Add picture

Name

Email Address

Type of User

Choose what the user can do in their account

Can modify configuration and run zones

Cancel


OK

User Name	The name of the new user
Email Address	The email address that the new user will use to log in to the account
Type of User	<ul style="list-style-type: none"> If you want the user to have full control over the controller, select "Can modify configuration and run zones." If you don't want the user to have control over configuration, select "Can view configuration, manually run zones."


IMPORTANT You cannot add a user who already has an existing Hydrawise account. If the user has an account, email us at support@hydrawise.com. We will delete the account from our system and you can then add the user accordingly.


Files

Towards the bottom of the accounts detail page, you can upload files which are useful in managing your garden. For example, you might like to add a picture which shows the layout of your garden and zones. Uploading of files is supported for Enthusiast plan customers.

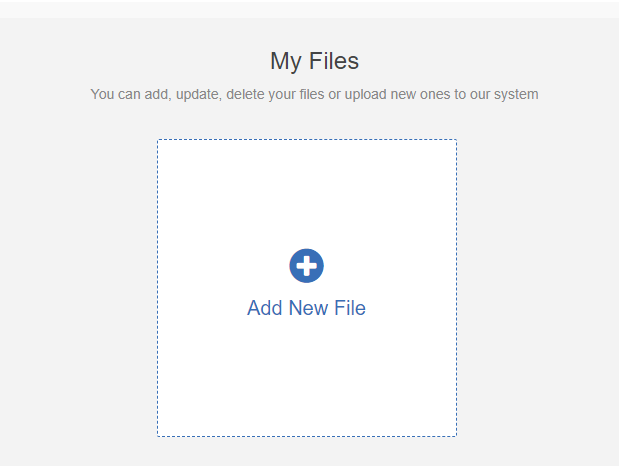


Account - Setting Delay

To set a delay between your zones (inter-zone delay) or for a master valve/pump before the zone starts (master valve delay), go to  menu then configuration as shown below:

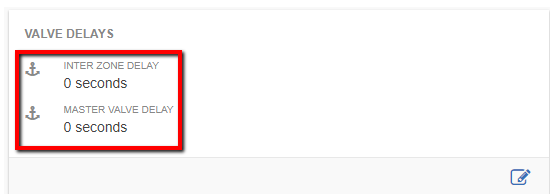

Delay	Description	Max Delay
Inter-Zone Delay	The delay between each zone's start times.	3,600 Seconds
Master Valve Delay	The number of seconds that the master valve starts before a zone starts.	600 Seconds

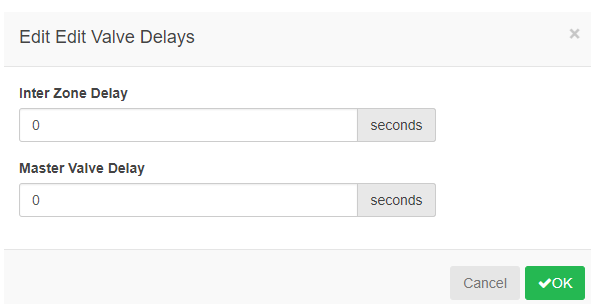

Some watering systems require water pressure for a sprinkler head to pop up. Thus, this delay can be used to ensure that water pressure is built up or maintained before a zone starts watering (or before the next zone begins watering) by delaying the time the next valve opens, ensuring water pressure is present. Depending on your specified setup, these delays can be used to meet those requirements. If you have questions about how to set delays, email us at support@hydrowise.com.


Account - Exporting Reports

The instructions below will allow you to download the report you choose to Excel.

To download your reports in Excel, click on the **Reports Tab**. After highlighting one of the download options listed below, you can click the download tab to automatically save to a excel file on your computer.

Download Options Include:

1. Day (Stacked)
2. Day
3. Week (Stacked)
4. Week
5. Month

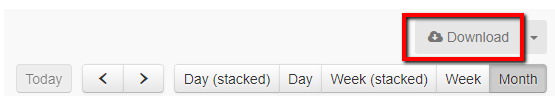

NOTE: The free Home Plan provides up to 30 days of reporting, and the Enthusiast Plan provides up to 365 days of reporting.

Account - Editing Serial Number

This article will cover the following information on editing your controller's serial number.

1. Linking to your account (Setup wizard and Dashboard)
2. Unlink controller from your account

Linking to Your Account


There are two locations where you can link your controller to your account:

- During the setup wizard (optional)
- From the controller **Dashboard**

NOTE: You only need to link your controller to your account once. If you provided a serial number when going through the setup wizard, you've successfully linked your controller to your account and you can ignore these instructions.

To link your controller through your account Dashboard, follow these steps:

- Log in to your account.
- On the Dashboard, click on the Settings icon located on the blue Watering Schedule bar. Then click the **Link to controller...** button.
- Enter your controller's serial number. The eight-character serial number is found on the side of the unit. The serial number is not case-sensitive.

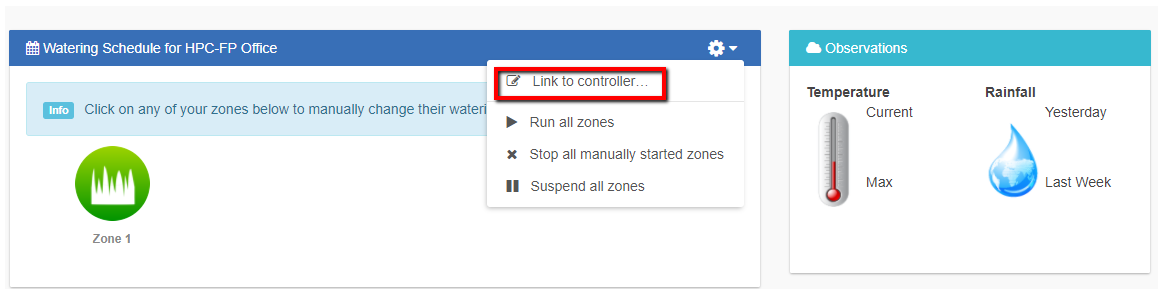


Once you've entered the serial number, your controller will automatically download your settings and begin watering based on your watering schedules.

Unlink From Account


This is important if you wish you resell your controller or want to transfer ownership to someone else. This prevents the next user from getting the error message that the serial number they are trying to link to their account is already in use.

To unlink a controller, follow the steps below:

From your browser, go to the top right of your dashboard and click on **Settings**. From your smartphone app, click on **More**. Then click on **Configuration**.

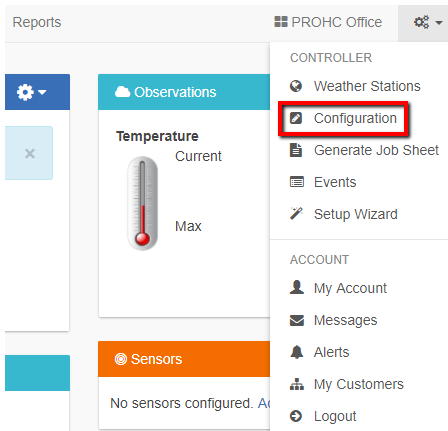


On the next screen, locate your serial number. Then click **Remove serial**.

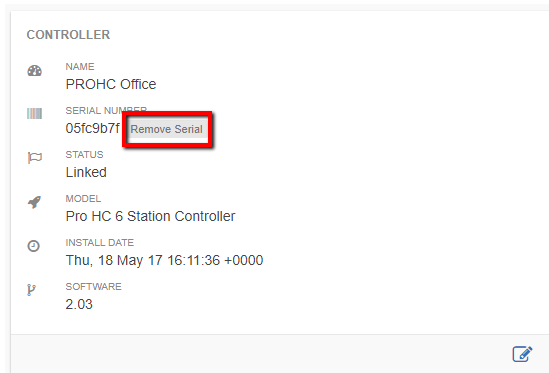


NOTE: This is helpful if you are either using controller on another site or replacing under warranty.

Account - Resetting Password

If you registered using your email address (i.e., not using the Facebook option), click on **Forgot password?** from the login screen.

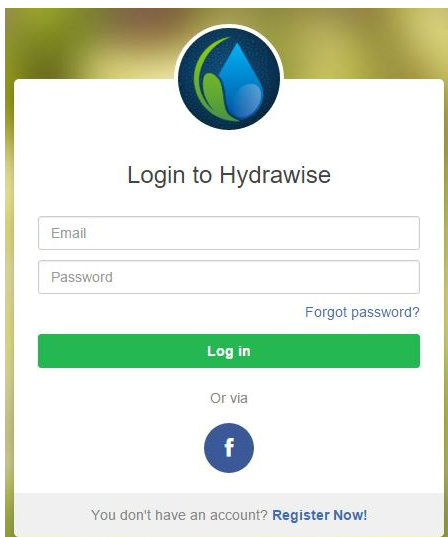

On the next screen, simply type in your registered email address and click **Reset Password**. You will then receive an email. Click the password reset link and enter in your new password. Confirm the password and you should be good to go again.

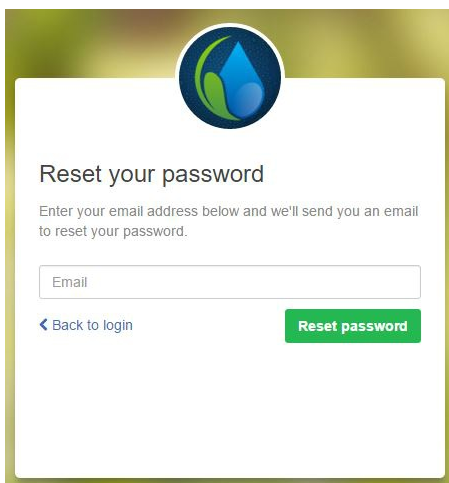

If you are having issues logging in to Facebook using the application, follow this guide to reset your password: [Unable to Log In Using Facebook App](#). Don't worry; you won't lose any settings.

Account - Not Receiving Hydrawise Activation Emails

We're sorry that you have not yet received an activation email from support@hydrawise.com. We use a third-party company to ensure our email has the best chance of getting to you.

The following tips will help you verify if the email was delivered. First, check your deleted items to see if the email was inadvertently deleted. If it was, move the email back to your inbox.

Next, look in your spam, trash, or junk folders. The email may have been sent to one of these folders due to email filters. If the email is in one of these folders, right click on the email and select "trust sender" or "always allow email from sender."

We recommend that you add support@hydrawise.com to your "safe senders," "allowed," or "trusted" email list. Depending on your email service provider, you can do this in several ways. Below are shortcuts to some popular providers:

[Outlook](#)

[Gmail](#)

[Apple](#)

Hydrawise does not use your email address for marketing purposes. To view our terms and conditions and privacy policy, visit www.hydrawise.com. Please contact us if you have questions.


Account - Translation Options

Steps to take to change language via Google Chrome


To change the language from English to your chosen language, follow the steps below.

The first thing you need to do is to make sure you are using [Google Chrome](#), which you can download by clicking the link. Once you have downloaded and installed [Google Chrome](#), you can then change the viewable language to your chosen language.


Once you have downloaded Google Chrome and are logged in to your account, you can right-click anywhere along the top of the dashboard and select **Translate to English**.

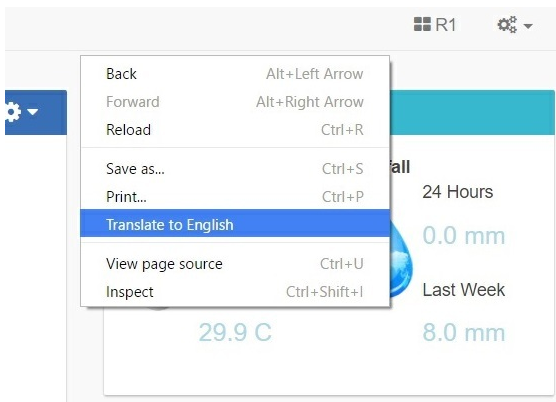


Once you have clicked **Translate to English**, the next dialogue box will appear. From here, click on **Options**.

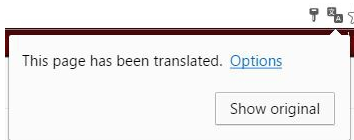

You will then be brought to the next dialogue box:

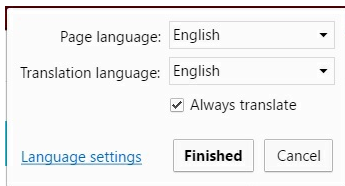


and

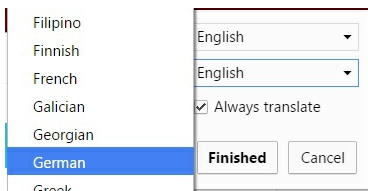

From here, you can select the language that you want. You also have the option to check **Always Translate**.

NOTE: Translation sometimes does not occur automatically when you click to navigate to another page. When this happens, press F5 or click **Refresh** to refresh the page. Follow the steps again from the top to translate the page to your chosen language.

This example shows the page translated in German:

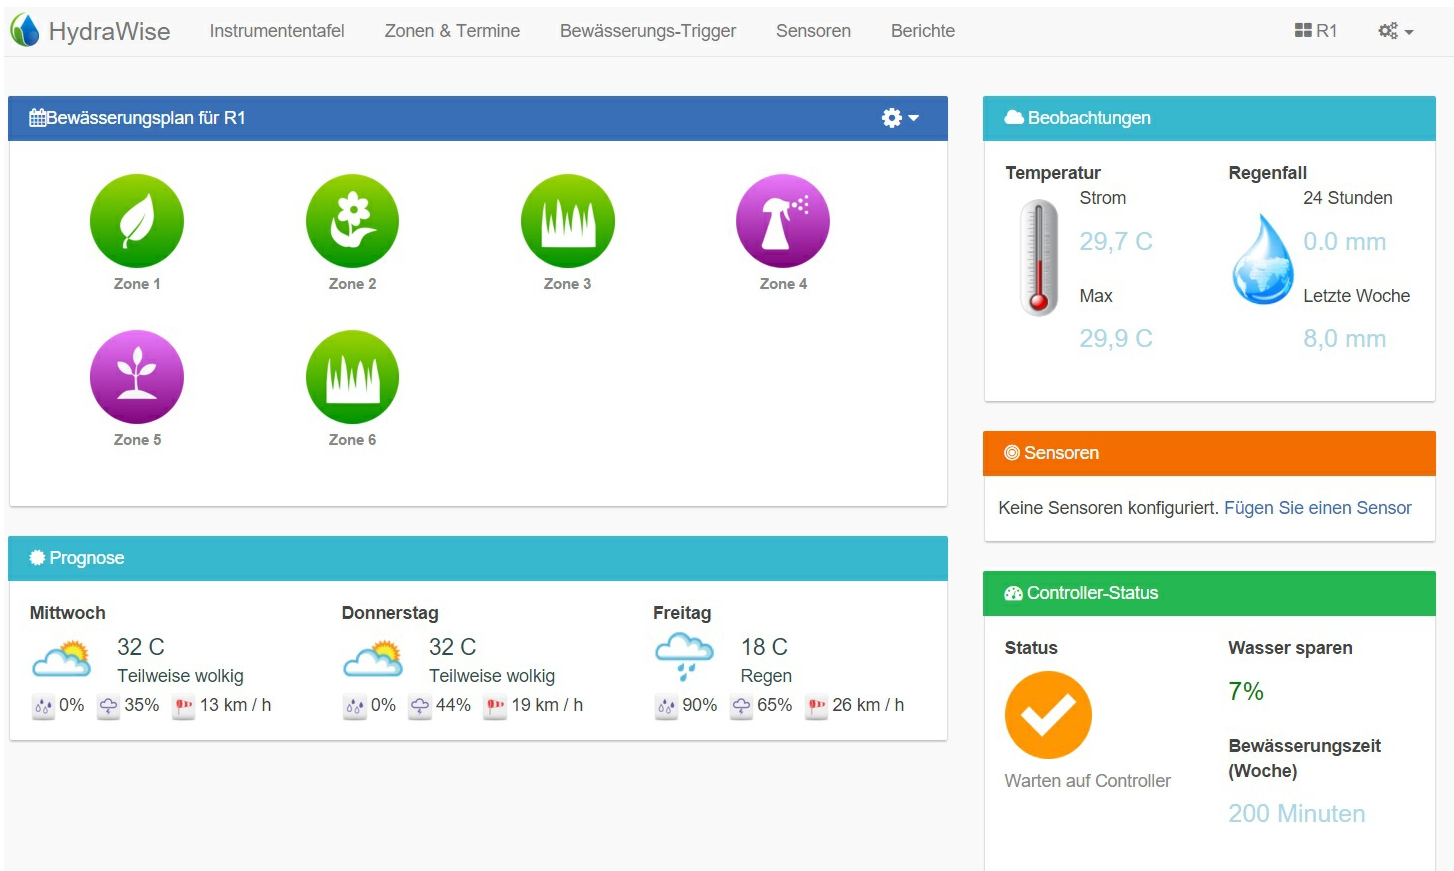

IMPORTANT: Please keep in mind that because translations are performed by Google Chrome, there may be some inaccuracies.

This method can also be used when going through our [Help Guides](#) here on Zendesk. If you need further assistance, email us at support@hydrawise.com.

Configuring - Several Watering Lengths One Zone


You will now learn how to achieve different watering times using one zone (or many zones, if you understand the concept of stacking start times).


Stacking start times means creating Program Start Times one after the other based on the duration of the watering length set for each zone.


For example, if you wanted Zone 1 to run for 10 minutes in the morning and 30 minutes in the evening, you would have to set up Zone 1 with a watering length of 10 minutes. Then you would use Program Start Times to achieve the watering times you want.


Typically, your zone setup should look like this:


NOTE: You must use "Every Valid Program Start Time" to achieve this goal, as the Program Start Time dictates when the zone is allowed to water.





Front Lawn
 Zone Number - 1


Watering Type
 Time Based



Frequency
 Every valid Program Start Time


Schedule Adjustments
 Water longer when hot


Run Length
 10 mins







To water for 10 minutes in the morning, you would create one start time at 7 a.m., for example, that allows Zone 1 to run for 10 minutes.



07:00

TYPE
 Selected days of week
 SN M T W TH F S

ZONES
 Front Lawn







For Zone 1 to run for 30 minutes in the evening, you will need to stack start times. For example, you will need to create program start times for Zone 1 at 7 p.m., 7:10 p.m., and 7:20 p.m., so the zone runs for a total of 30 minutes.


07:00

TYPE
 Selected days of week
 SN M T W TH F S



ZONES
 Front Lawn






19:00

TYPE
 Selected days of week
 SN M T W TH F S



ZONES
 Front Lawn






19:10

TYPE
 Selected days of week
 SN M T W TH F S



ZONES
 Front Lawn






19:20

TYPE
 Selected days of week
 SN M T W TH F S


ZONES
 Front Lawn



 Add Watering Time

By having the program start times dictate when zone one is allowed to water, we have achieved 10 minutes of watering in the morning and 30 minutes of watering in the evening without modifying the irrigation zone's configuration. See below for what the schedule will look like.

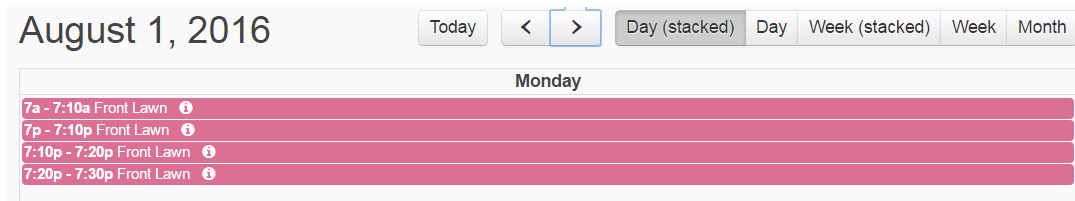

You can see there are 10 minutes of watering at starting at 7 a.m. Then, starting at 7 p.m., there is a total of 30 minutes of watering as a result of stacking your Program Start Times.

IMPORTANT: This method only applies with **Predictive Watering™** and will not work with Smart Watering. The water trigger "Water More Often When Hot" will not also work if you want to use this method, as it uses "Every Valid Program Start Time."

Configuring - Preconfigured Schedules

Watering Schedules allow you to configure watering times, watering frequencies, and schedule modification settings for your irrigation zones.

Preconfigured Watering Schedules

Preconfigured Watering Schedules allow you to group together zones with identical watering properties.

Lawn

RUN TIME

20 mins

WATERING FREQUENCY

Twice a day

SCHEDULE MODIFICATIONS

Water more often when hot

Lawn 1

RUN TIME

10 mins

WATERING FREQUENCY

Twice a day

SCHEDULE MODIFICATIONS

Water more often when hot

Time Based

RUN TIME

15 mins

WATERING FREQUENCY

Three times a day

SCHEDULE MODIFICATIONS

Water more often when hot

Water Longer

RUN TIME

180 mins

WATERING FREQUENCY

Every valid Program Start Time

SCHEDULE MODIFICATIONS

Water longer when hot

Water More

RUN TIME

180 mins

WATERING FREQUENCY

Four times a day

SCHEDULE MODIFICATIONS

Water more often when hot

+

Add Watering Schedule

Watering Schedules can be used for zones that are running either Time-Based Predictive Watering or Smart Watering. However, for Smart Watering zones the Schedule Adjustment option in a preconfigured Watering Schedule is not used. For more information, see [Configuring Irrigation Zones](#).

Each Watering Schedule contains the following settings:

Schedule Name	This is the name of the Watering Schedule
Run Time	This is the watering time for this landscape type under normal conditions (if it is too hot or cold, this value will be automatically adjusted)
Watering Frequency	How often this schedule needs to run
Schedule Modifications	<p>When the day's forecast or current temperature is above your threshold, you can choose how often extra watering occurs.</p> <p>Don't water When and Adjust watering:</p> <ul style="list-style-type: none"> • Forecast below 60F • Wind above 9mph • 3in+rainfall last 7 days • 80%+chance of rain • 0.1in+ rainfall last day • Water 30% less when below 73F

- Water 30% less when below 73F
- Water longer when hot
- Water more often when hot

If you are using a watering frequency of Every Valid Program Start Time, watering will occur at each Program Start Time regardless of schedule modifications set above.

NOTE: Watering Schedules are not just time based; they work for smart watering zones, too. You create the schedules in advance for use across multiple zones.

Configuring - Trigger "Water More Often When Hot"

You will now learn how to use this particular watering trigger. Please follow the example below to set up this watering trigger per zone.

IMPORTANT: This feature is only available when using **Predictive Watering™** and **DOES NOT** apply to **Smart Watering** unless you use a preconfigured Watering Schedule. For more information on Watering Triggers for Smart Watering, click here: [Smart Watering Adjustment](#); for Watering Schedules, click here: [Configuring Watering Schedules](#).

Step 1.

- Create a zone and set the watering trigger to "Water More Often When Hot."
- Set watering frequency to once a day (this setting will be explained later).

Zone Details ▶ Time Based Schedule ▶ Cycle & Soak ▶ Advanced

Watering Type
☒ Enter Time and Frequency below
☐ Use a Preconfigured Watering Schedule

Watering Length
The number of minutes this zone will run for each time
 minutes

Watering Frequency
Choose how often this zone should run
☒ Every Program Start Time ☐ Interval Based Watering

Schedule Adjustments
Choose how to adjust the watering time based on your weather triggers

Cancel < Prev Next > ✓ OK

There is one zone for this example (highlighted in red) that utilize **Predictive Watering™** and are set to use the schedule adjustment "Water More Often When Hot."

Front Grass
Zone 1
Watering Type: Smart Watering
Run Length: 1 mins
Peak Watering Frequency: Every 2 days
Schedule Adjustments: Waters when estimated moisture level reaches 0%

Front Flowers
Zone 2
Watering Type: Time Based
Run Length: 15 mins
Frequency: Every Program Start Time
Schedule Adjustments: Water more often when hot

Back Drip
Zone 3
Watering Type: Smart Watering
Run Length: 1 mins
Peak Watering Frequency: Every 2 days
Schedule Adjustments: Waters when estimated moisture level reaches 0%

Step 2. Create two program start times, for example:

IMPORTANT: Make sure you have all zones selected for the start times created (or, at the very least, the zone you intend to "Water More Often When Hot").

Program Start Times

Your controller's watering Program Start Times are listed below. These times specify when your controller is permitted to do any watering. ⓘ

🕒 07:00

TYPE

Selected days of week

SN

M

T

W

TH

F

S

ZONES

All Zones

🗑️

✎️

🕒 19:00

TYPE

Selected days of week

SN

M

T

W

TH

F

S

ZONES

All Zones

🗑️

✎️

+

Add Watering Time

Step 3. Set your watering triggers accordingly. You can set these up however you like. See below for this example:

🌧️ Don't water when today's forecast temperature is less than

🔘

60 F

0 F

130 F

🌡️ Water 30% less when today's forecast temperature is less than

🔘

75 F

0 F

130 F

🔥 Water 100% more when today's forecast temperature is above

🔘

90 F

0 F

130 F

🌧️ Don't water when today's forecast humidity is below

🔘

30 %

0 %

100 %

☁️ Don't water when the chance of rain is higher than

🔘

80 %

0 %

100 %

💨 Don't water when today's forecast wind speed is higher than

🔘

14 m/h

0 m/h

100 m/h

Suspend Watering via Weather Station Measurements

Automatically stop your watering based measurements from your weather stations

☁️ Don't water when the last 24hr rainfall is higher than

🔘

0.15 in

0 in

5 in

☁️ Don't water when the last 7 days rainfall is higher than

🔘

3 in

0 in

5 in

When you check your **Watering Schedule** on the days that meet your watering triggers, extra watering will occur. For example, you will notice all watering that has been set to start at 7 p.m. is "extra watering due to temperature."

Setting your frequency affects how this feature works. For it to work correctly, you must always have an extra program start time that is above your watering frequency. In our example, we used "water once a day" and created two program start times so extra watering can occur once. If you wish to change this, you must ensure the above is met. For instance, if you have set watering to twice a day, you must create three program start times for the third program start time (the extra watering schedule) to take effect.

	Front Flowers	Flowers ⓘ
	Extra watering cycle due to temperature	
	Time: Mon, 7:07pm	
	Length: 5 minutes	
7a Front.Gra	Program start time: Mon, 7:00pm	Front.Gra ⓘ
7:07a Front	7:00pm	Front Flowers ⓘ
7p Front.Gra		Front.Gra ⓘ
7:07p Front Flowers	7:07p Front Flowers	7:07p Front Flowers ⓘ

NOTE: Due to changes made to this setup, the extra zones do not show on the above screenshot because those are passed events on my watering schedule. At this time, due to weather changes, no extra watering has been scheduled. Thus, only past events were used in this example.

IMPORTANT: To ensure that "Water More Often When Hot" works, you need to have an extra program start time that is above your watering frequency. If you select "Every Available Program Start Time" as a watering frequency, this feature will not work because watering is already scheduled for all program start times.

The general calculation is:

<number of times per day> multiplied by (1 + <trigger percentage>) = number of watering times for the day (rounded down)

So, for once a day and a 50% trigger, the calculation is:

$$1 \times (1 + 0.5) = 1.5 = \text{once a day (rounded down)}$$

Twice a day multiplied by (1 + trigger percentage) could be greater than 2 if the percentage is greater than 50%:

$$2 \times (1 + 0.5) = 3 = 3 \text{ times a day}$$

Twice a day multiplied by (1 + trigger percentage) with a trigger percentage of 100% would give you 4 times a day:

$$2 \times (1 + 1) = 4 = 4 \text{ times a day}$$

IMPORTANT: If you require multiple waterings per day, this is the one situation where low-priority watering times are useful. You could have a normal watering time of 6 a.m. and 6 p.m. and a low-priority time of 12 p.m., which will get used only if you are watering more often and you need a third cycle for the day.

Please feel free to test this setup as you see fit for your watering needs. Should you have further questions, send an email to support@hydrawise.com.

Smart Watering - Quick Reference

How Does it Work?	Description
When does it water?	Waters when estimated moisture level reaches 0% in zones and schedules.
Choosing Run Times	See run time calculator here or consult with local contractor/distributor.
How is ET calculated?	The calculation is done through the run times and the last 10 years of ET history based on the hottest time of the year for that location.
Forecasting High Temperature	Forecast three days in advance.

Programming: Zones and Schedules	Description
Enter Watering Length	Enter the number of minutes you want the zone to run (hottest time of the year)
Enter Peak Watering Frequency	Enter the time between watering in the peak of your irrigation (hottest time of the year) Example: 1 day interval means the system will water every day in the summer schedule.
Next Available Start Time Box	Checking this box will reset the smart water balance to 0. If this box is not checked when changing from time based to smart watering then the bar will automatically be at 100%.
Cycle/Soak	This helps reduce runoff by running small increments with same total run time. This is used instead of soil type and slope. <i>Example:</i> Station 1 requires 20 minutes of watering, but after 5 minutes, runoff occurs. However, after 10 minutes all the water is absorbed. The solution would be to program 20 minutes for the station run time, 5 minutes for the Cycle time, and 10 minutes for the Soak time.
Advanced	Fine tuning: This feature is designed to slow down or speed up the drying process. If the soil is too wet, then we allow it to dry for longer, too dry, smart watering will allow less drying time.

Example: If we have every 2 days set as the frequency, this is not the minimum frequency as it is merely a reference point based on the driest time of the year. If we experience a drier time, we may need to water each day. Likewise, if we have a wetter time the frequency will increase, allowing for more time between watering.

Water Triggers	Description
Use forecast temperature to predict Smart Watering	This trigger allows frequency adjustment based on the current season.
Use forecast rainfall to delay Smart Watering	This feature assists in delaying irrigation when rain is predicted.


Smart Watering - Adjustment and Changes

This article covers the **Smart Watering Adjustment** and discusses how changing these settings can affect your watering.

First, as described under features: **Smart Watering** is an automated watering schedule that uses information about environmental conditions to ensure your plants get the optimum amount of water. Evaporation will draw moisture from your garden, while rainfall and irrigation will add moisture. Understanding these conditions allows Hydrawise to decide when the time is right to water your garden.

NOTE: This calculation occurs in the background and may not always be reflected when checking reports or viewing your **Dashboard**. However, the feature does work and is reliable even if you can't visibly see these calculations.

In this example, there are two Smart Watering zones highlighted in red:

**Front Grass**
Zone Number - 1

Watering Type

Smart Watering (Water longer when hot)

Peak Watering Frequency


Every valid Program Start Time

Schedule Adjustments

Waters when estimated moisture level reaches 0%

Run Length

2 mins

**Front Flower**
Zone Number - 2

Watering Type

Time Based

Frequency

Once a day

Schedule Adjustments


Water more often when hot

Run Length

5 mins

Cycle & Soak

Enabled

**Back Grass**
Zone Number - 3

Watering Type

Smart Watering (Water longer when hot)

Peak Watering Frequency

Every valid Program Start Time

Schedule Adjustments

Waters when estimated moisture level reaches 0%

Run Length

2 mins


The **Watering Triggers** use Smart Watering Adjustments and have been left as default, with both switched on:

NOTE: If you turn off "Use forecast temperature to predict Smart Watering," your Smart Watering zones will not water. This is because all calculations have been switched off, and Smart Watering is calculated using weather data to predict estimated soil moisture balance. You can use this feature when you don't want any watering to occur without having to suspend your Smart Watering zones.

The second option, "Use forecast rainfall to delay Smart Watering," assists with delaying irrigation when rain is predicted. Refer to the example below to see how this is affected when it is turned off.

Time Based Predictive Watering Adjustments

Smart Watering Adjustments



For smart watering based zones your controller will automatically adjust watering times based on your soil conditions. Your Hydrawise controller uses temperature, humidity, wind speed and rainfall to estimate when each zone requires watering.

Suspend Watering - Weather Forecasts

Use forecast temperature to predict smart watering

ON


Use forecast rainfall to delay smart watering

ON

Copyright 2018 Hunter Industries. All Rights Reserved.

71

This is what your watering schedule will look like with these settings are combined with the weather forecast from your selected weather station.

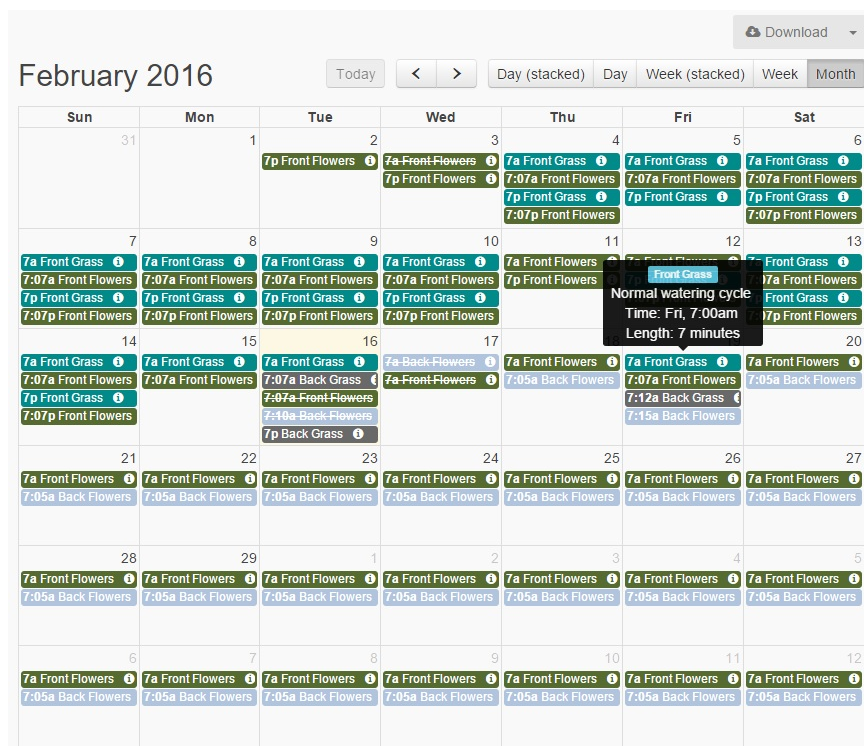

Now if we are to change the watering trigger on the second option to off as shown below:

Time Based Predictive Watering Adjustments
Smart Watering Adjustments

For smart watering based zones your controller will automatically adjust watering times based on your soil conditions. Your Hydrowise controller uses temperature, humidity, wind speed and rainfall to estimate when each zone requires watering.

Suspend Watering - Weather Forecasts


Use forecast temperature to predict smart watering

Use forecast rainfall to delay smart watering

ON

OFF

You will notice when checking your watering schedule that it has been changed to water a day earlier on both zones. This is because the trigger "Use forecast rainfall to delay Smart Watering" is on (this is based on the calculations from the weather station; there is rain predicted on 18th). It has not been scheduled to water on that day, and watering has been pushed to the 19th. However, since we turned off this feature, watering will occur regardless if rain is predicted.

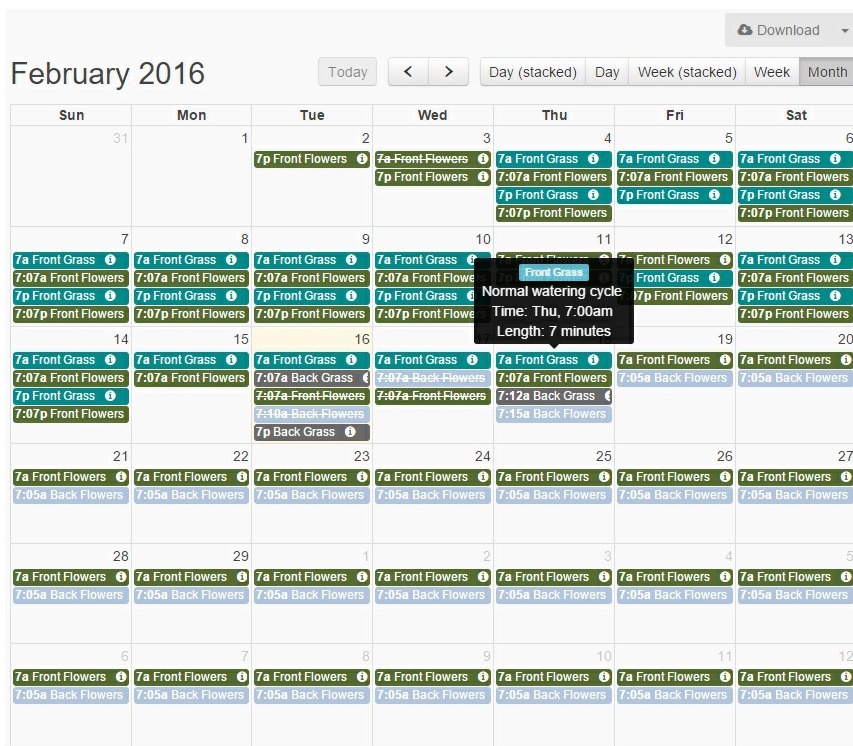

IMPORTANT: Some things to keep in mind when using Smart Watering:

Remember that Smart Watering schedules are based on estimated soil moisture balance and how you specify the watering length and peak watering frequency. Thus, the higher your estimated soil moisture balance, the less likely a smart watering zone will be scheduled to water. More importantly, please remember that Smart Watering only forecasts three days in advance. If there is no watering scheduled during the next three days, you will see **Not Scheduled** next to **Next Run** when you highlight over your Smart Watering zone on your dashboard.

- If you choose to change the watering time, you can always go to the tuning tab on any zone for both Smart Watering and Time-Based **Predictive Watering™** to modify watering length as shown below:

Zone Details
Smart (ET) Schedule
Cycle & Soak
Advanced

MASTER VALVE
☒ Use Global Master Valve Setting
☐ Disable Master Valve

WATERING ADJUSTMENT
Fine tune your watering if your zone appears to be too dry or wet

Water Less
Normal
Water More

Water for normal watering length

Cancel
< Prev
Next >
OK

Please refer to the link above to gain further understanding of smart watering, if needed. If you have further questions regarding this feature, email us at support@hydrawise.com.

A final note: Although both Smart Watering and time-based **Predictive Watering™** achieve similar water savings due to “predictive weather” watering triggers, time-based watering is easier to understand and adjust.

Wireless - Wi-Fi Specifications

The following Wi-Fi requirements apply to your Hunter Hydrowise-ready controller:

- Hunter HC controller is 802.11 B/G
- Hunter Pro-HC controller is 802.11 B/G/N
- Hunter HPC controller is 802.11 B/G/N

Here are some tips to ensure optimal controller functionality:

WIFI Checklist:	
Bandwidth	2.4 GHz only. Not compatible with 5 GHz
Router Channel	Set between 1-11
Security Type	WPA or WPA 2
Guest Networks/Networks with portal page login	Not compatible
Mac Address (If Needed)	<ul style="list-style-type: none">• HC - Enter 001e followed by serial number (e.g., 001e05fb90ce)• HCC/HPC/PROHC - Enter f8f0 followed by serial number (e.g., f8f005fb90ce)
NOTE: The network must not contain enterprise access points that have been configured to require certificates or other forms of enterprise authentication.	

Additional Information

The network must not contain enterprise access points that have been configured to require certificates or other forms of enterprise authentication. Hydrowise-ready controllers cannot connect to guest networks or networks that use a portal page to log in.

The HC and Pro-HC controllers only connect to the Wi-Fi network to gain internet access to Hydrowise cloud-based servers held within AWS (Amazon Web Service) cloud-based systems. If you connect the controllers via MAC addressing, use the manual method. Do this by entering the prefix 001e followed by the controller serial number for the HC (e.g., 001e05fb90ce) and entering the f8f0 followed by the controller serial number for the PROHC (e.g., f8f005fb90ce).

The Hydrowise system allows for remote controller programming via smartphones, tablets, and internet-connected computers. All functions of the Hydrowise system can be performed from these devices.

- Internet-connected computers and laptops connect to the local network through the internet and to the Hydrowise cloud via a web login at hydrowise.com. This web link provides a unique login and secure password access to the Hydrowise system located on the AWS servers.
- Smartphones and tablets require the use of an app that provides a secure connection to the Hydrowise system on the AWS servers. Hydrowise provides iOS and Android apps.

Hydrowise Security Statement

All Hunter Internet-connected devices, including Hydrowise™-enabled irrigation controllers, maintain the highest standards for security.

Web and App Security

Hunter follows industry best practices for security:

- All information exchanged between your controller and the Hydrowise service is encrypted, and no user identifiable information is transmitted between the controller and the Hydrowise service.
- We support industry standard protocols to secure your Wi-Fi connection. We strongly recommend that you use WPA2 to secure your Wi-Fi connection.
- All information exchanged between your web browser or app and the Hydrowise service is encrypted.
- When accessed remotely through our service, the Hydrowise system can only see your controller. It cannot view or access any other devices on your home network.
- No information about your home network (e.g., wireless name or passwords) is transmitted to the Hydrowise service. Your wireless password is hidden on the controller touch screen as soon as your controller connects to the Hydrowise service.
- We do not use port forwarding or require any router ports to be opened.

To help maintain a secure system, Hunter:

- Continually upgrades all controller firmware and software.
- Employs both internal and external system auditing.
- Consults with independent security companies to ensure we are following best practices.
- Performs full code penetration testing.

Wireless - Connecting to Hotspot

If you do not have internet access and want to sync your controller to your application so all settings and schedules are downloaded to the controller,

you can use your smartphone as a hotspot.

Please use either guide below, depending on your smartphone:


Apple hotspot

Android hotspot


Once you activate your hotspot, connect the controller to verify the Wi-Fi on the controller is working properly. You can do this by following the steps [here](#).

Wireless - Controller Not Connecting

- 1. Check that your wireless router is powered on.
- 2. Make sure that the controller is close enough to wireless access point/router.
- 3. Make sure that the router has 2.4GHz W-Fi enabled. The controller will connect to 2.4GHz 802.11b/g wireless access points. Some routers are set to accept 5GHz only.
- 4. Check that the security mode for both your wireless router and controller are the same. Hydrawise strongly recommends WPA2 personal for both the wireless router and controller. If your router is not configured for this, try changing the security mode to WPA2 personal.

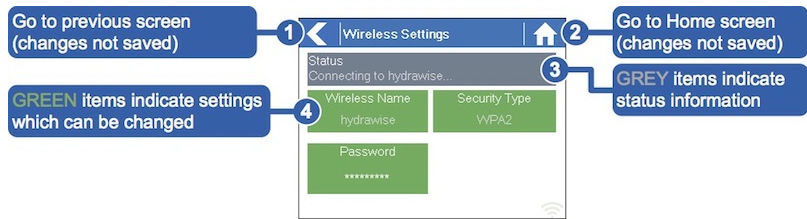

- 5. Navigate to the Network Settings page on the controller. Check to see if the signal icon on the lower right corner of the screen is blinking or if it is solid green. A blinking icon means it's trying to connect, and a solid icon means it is connected to the wireless router.

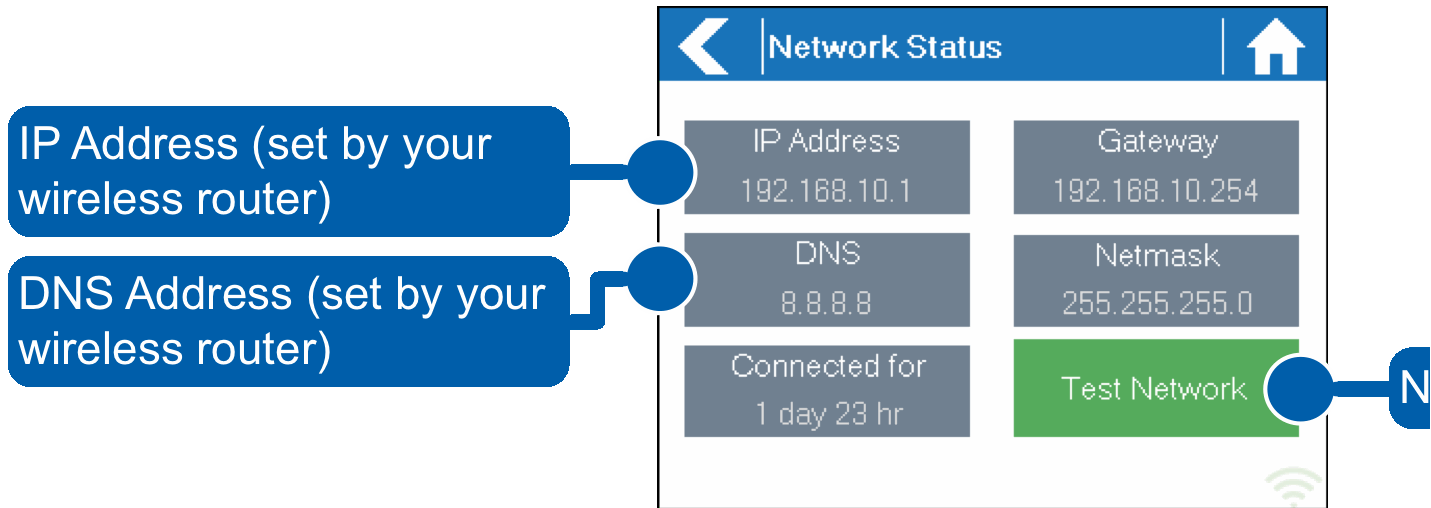

- 6. Press **Test Network** on the controller. This will do a ping test to your local wireless modem, your DNS server, and the Hydrawise server. Make sure the tests are successful.

Test Network can be used to test network connectivity for troubleshooting purposes. The network test will verify connectivity to four destinations.

Checking Wi-Fi	Performs a ping test to the Gateway address listed in the Network Status screen. If this test fails, check that you don't have MAC address filtering enabled on your router.
Checking DNS	Performs a ping test to the DNS address listed in the Network Status screen. If this test fails, check that the DNS address is correct. If it is wrong, correct the DNS address under DHCP Settings on your wireless router. This test may fail if the DNS server does not accept ping requests.
Checking	Performs a ping test to the Google server at IP address 8.8.8.8. This is a well-known server that accepts ping requests on the internet. If this test fails, that means there

Internet	is an issue with the internet configuration of your wireless router.
Checking Hydrawise	Performs a ping test to the Hydrawise servers. If this test fails, there may be an issue with the internet configuration of your wireless router.


7. Make sure you have values in your IP address, Gateway, and Netmask. Make sure that the DNS server setting on the controller matches the other settings on your device.
8. Check other devices that are connected to the same access point to see if they can go to the Hydrawise website.

You can also refer to our network requirements article for further information by clicking [Wi-Fi Specifications](#)


Wireless - Static IP Address

In this guide, you will learn how to set up a static IP address instead of using DHCP.

Step 1. From the controller's home screen, tap on **Settings**.

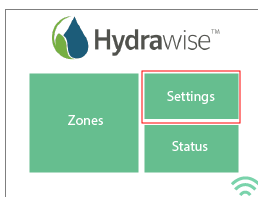


Step 2. Tap on **Wireless**.

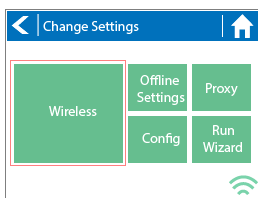


Step 3. Tap on **Network Mode - DHCP Mode**.

USE

Step 4. Tap on **Enter Network Settings Manually** then tap on **Confirm**.

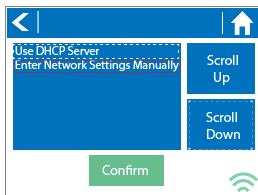

Step 5. Tap on each field to enter the IP settings manually.

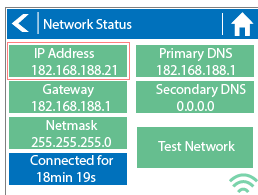

Once you have completed entering all the IP settings manually, click on **Test Network**. This ensures the controller has successfully connected to your router using the **Static IP Settings** that have just been set.

For more information, contact us via email at support@hydrawise.com or call us using the numbers on our [Contact Us](#) page.

Offline Mode - Accessing Offline Mode


Offline Mode

If the controller loses its internet connection for more than 24 hours, you'll receive a notification email. The controller will then go into offline mode. In offline mode, your controller won't be able to access local weather conditions such as rainfall or evaporation. As a result, it will revert to a predefined program.


- For **Smart Watering** zones, the controller will adjust each zone's watering length based on your offline watering budget and will water at each zone's configured peak watering frequency.
- For **Time-Based Watering** zones, the controller will adjust each zone's watering length based on your offline watering budget and will water at each zone's configured watering frequency.
- Note that **Cycle and Soak** is not supported in offline mode and each zone will water for its full watering length without pausing.
- The controller will only water at your configured **Program Start Times**.

To set your controller to **offline Mode** for manual configuration, please follow the steps below:


Step 1. From the main menu, tap on **Settings**.

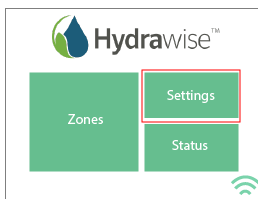


Step 2. Tap on **Offline Settings**.

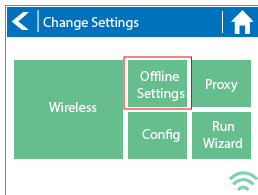


Step 3. Tap on **Disable Wi-Fi**.

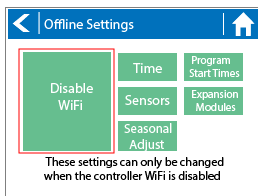

Step 4. You will be presented with a warning dialogue. Please make sure you understand the warning before proceeding. If you're sure that you want to go offline, tap **Go Offline**.

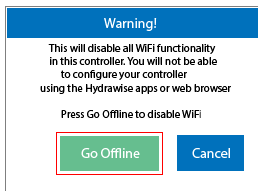

Step 5. Now that your controller is in Offline Mode, you can configure it manually by tapping on **Program Start Times**.

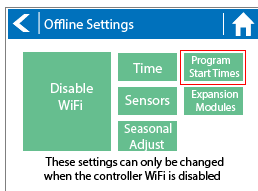


Step 6. From this screen, you can manually configure each zone according to your desired schedule. Simply tap on **Add** to add a program start time and follow the steps below. You can toggle between zones by tapping on **Next/Previous** or you can leave the start time to **APPLY to ALL ZONES**.

Applying the start time to **ALL ZONES** will run through all zones with a single start time.


1. Tap **ADD** in the start times menu.
2. Select the green box upper in left to enter **PROGRAM START TIME (24 hr format)**
3. Tap the **DAYS** to be selected **after** finished with start time entry.
4. Tap **CONFIRM** to save the start time entry.
5. Add a second start time for all zones or single zone if desired.
6. Tap the **HOME** icon (upper right) to allow station run times setup.

NOTE: Each zone can have up to four program start times and an additional four start times under the **All Zones** section as shown below.

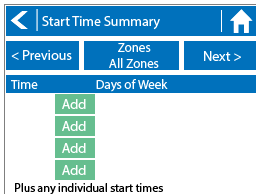

Step 7. From the home screen, you can manually configure each zone run time. Simply tap on **ZONES** to add a zone run time and follow the steps below. You can toggle between zones by tapping on **each zone number**.

1. Tap **ZONES** in the home menu.
2. Tap the first zone to edit, (**For Example: ZONE 1**).
3. Tap on **RUN TIME** in the center of the screen.
4. Enter **RUN TIME (minutes:seconds format)**, then press **OK** to save entry.
5. Repeat steps **1-4** for station run times.

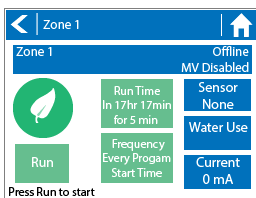


NOTE: To get your controller back in online mode, follow the above steps, enable Wi-Fi, reconnect to your SSID (Wi-Fi connection), and let the controller synchronize with your online Hydrowise account.


Offline Mode - Run the Setup Wizard

Please follow the steps below to run the setup wizard in offline mode. Refer to [Setting Controller to Offline Mode](#) or [How to Factory Reset Controller](#) before running the wizard.

Step 1. From the **Connection Wizard** screen, tap on **Configure Offline**. If you select **OK**, you will proceed to the online setup wizard.

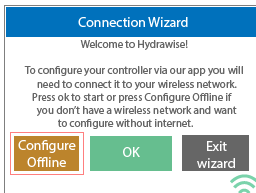

Step 2. Tap **OK** to move on to the next step.

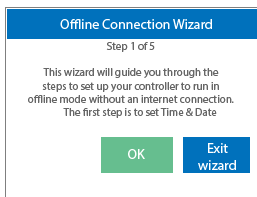

Step 3. Enter in today's date if it hasn't already been set or if it is incorrect.

Step 4. Enter today's time if it hasn't already been set or if it is incorrect.

Step 5. From this screen, tap **OK**.

Step 6. Please assign your **Master Valve** if you're running one as advised on the previous screen. Otherwise, keep **Not Assigned** selected and tap **Confirm**.

Step 7. Tap **OK**.

Step 8. You can now enter (in minutes) the run length you want for your **default zone run time**. Then tap **OK**.

Step 9. Tap **OK** to proceed to the next screen.


Step 10. Next, set how often each zone will run. As advised on the previous screen, you can set individual frequencies for each zone.

Step 11. Tap on **OK** to proceed.

Step 12. From this screen, you can manually configure each zone according to your desired schedule. Simply tap on **Add** to add a program start time and follow the steps below. You can toggle between zones by tapping on **Next/Previous** or you can leave the start time to **APPLY to ALL ZONES**.

Note: Each zone can have up to four program start times and an additional four start times under the **All Zones** section as shown below. Applying the start time to **ALL ZONES** will run through all zones with a single start time.


1. Tap **ADD** in the start times menu.
2. Select the green box upper in left to enter **PROGRAM START TIME (24 hr format)**
3. Tap the **DAYS** to be selected **after** finished with start time entry.
4. Tap **CONFIRM** to save the start time entry.
5. Add a second start time for all zones or single zone if desired.
6. Tap the **HOME** icon (upper right) to allow station run times setup.

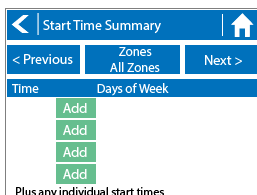

Step 13. From the home screen, you can manually configure each zone run time. Simply tap on **ZONES** to add a zone run time and follow the steps below. You can toggle between zones by tapping on **each zone number**.

Note: The default run time and default watering frequency are applied to all zones during the setup wizard. Setting individual run times and frequencies is done by going into each zone afterwards

1. Tap **ZONES** in the home menu.
2. Tap the first zone to edit, (**For Example: ZONE 1**).
3. Tap on **RUN TIME** in the center of the screen.
4. Enter **RUN TIME (minutes:seconds format)**, then press **OK** to save entry.
5. Repeat steps **1-4** for station run times.

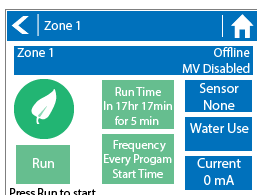


NOTE: To get your controller back in online mode, follow the above steps, enable Wi-Fi, reconnect to your SSID (Wi-Fi connection), and let the controller synchronize with your online Hydrowise account.


Offline Mode - Sensors

Please follow the steps below to add and configure your sensor or flow meter in **Offline Mode**. Please use the following link for [Installation Instructions](#).


Step 1. From the main menu, select **Settings**.

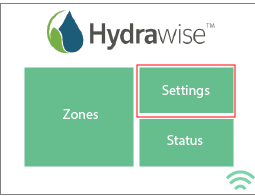


Step 2. Next, select **Offline Settings**.

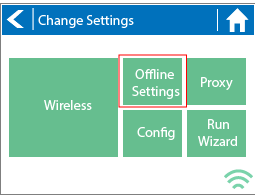

Step 3. Select **Sensors**.

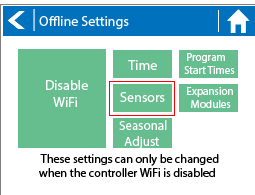

Step 4. From this screen, you can now navigate between **Sensor 1** and **Sensor 2** by using the **Next** and **Previous** options. Just as you configure your sensors online, you can select the different options to make changes accordingly.

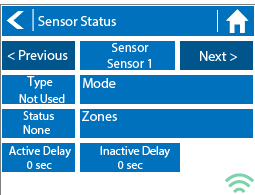

Sensor Status Options	
Type Options	Not Used, Level (Rain Sensor) or Flow Meter
Mode	Stop when open, Stop when closed, Start when open, or Start when closed.
Status	Open or Closed
Zones	Applies to all zones
Active Delay	Seconds
Inactive Delay	Seconds



Offline Mode - Seasonal Adjust

Offline water adjustments allow the controller to automatically adjust the amount of watering on a month by month basis if the controller is in an Offline mode (ie. not connected to the internet). Steps below will cover both online and offline instructions on changing the seasonal adjust for when

the controller enters offline mode.

Online: Offline Water Adjustment


1. Select the three gears on the upper right.
2. Scroll down to configuration.
3. Offline adjustments will be towards the bottom of the page. Sliders can be moved to adjust the offline watering from 0%-300%.

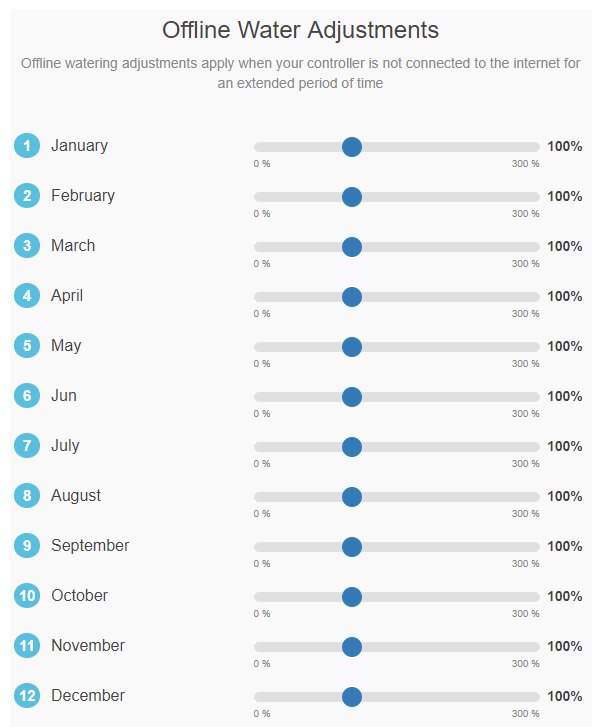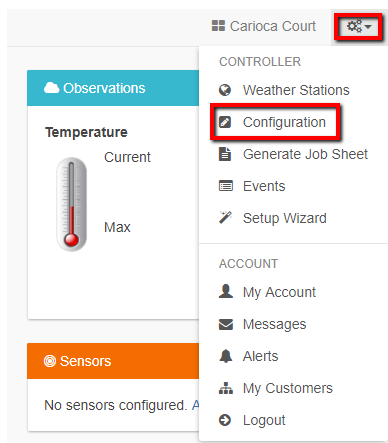

Offline: Offline Water Adjustment

1. Select settings.
2. Next, select offline settings.
3. Select seasonal adjust.
4. Select a month to adjust.
5. Adjust each month by a percentage then select OK.

Controller screenshots below:

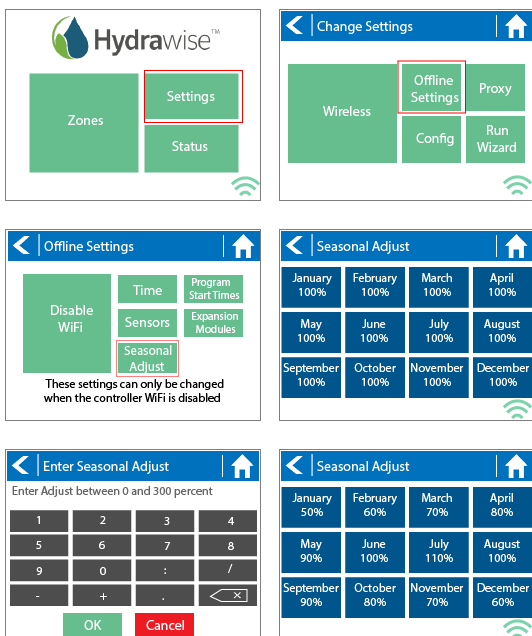

Account - GraphQL API

Hydrawise uses a **GraphQL API Solution** for its new API. The **GraphQL API** provides improved security and access management.

Here is some information on the API style we are using: <http://graphql.org/>

In order to use this API, you will need an OAuth Client ID. The OAuth Client ID will require manual registration by our team. Please send an email to Anthony.long@hunterindustries.com for manual registration. We will need the following information.

- Name
- Company
- Company APP or brand
- Hydrowise App information you require access too.

The API allows you to do live queries against our API. The types of information available are the following:

- Manually Start /Stop / Suspend by Zone
- Manually Start /Stop / Suspend for all Zones
- View alerts.

You can also do complex interrogations, below is an example of a contractor wants to view all his controllers, their locations, and zones.

```
{
```

```
me {
  email
  lastContact
  controllers {
    name
    zones {
      number,
      name
    }
  }
  location {
    address
    state
    coordinates {
      latitude,
      longitude
    }
  }
}
```

The following documentation applies to our API use.

Smart Voice Device - Amazon Alexa

In this guide, we will explain how to link your Amazon Alexa account with your Hydrowise account.

Once you have linked your Alexa account to your Hydrowise account, you will be able to start, stop, or suspend zones using voice commands to your Alexa device. For example, you can say, "Alexa, ask Hydrowise to start Zone 1."

NOTE: Alexa supports only one controller per account. If you have multiple controllers linked to your account, Alexa does not know which controller you are referring to and will not be compatible.


Adding the Hydrowise skill to Alexa

To get started, you will need to make sure you have a Hydrowise account and have your controller configured. If not, please register for a free account [here](#).


Once you have your Hydrowise account ready, log in to your Alexa account (if you don't have one yet, you can register [here](#)).

NOTE: Your Alexa account and your Hydrowise account can use different email addresses.

Go to the **Skills** section on your Alexa Dashboard, search for the Hydrowise skill, and select it.

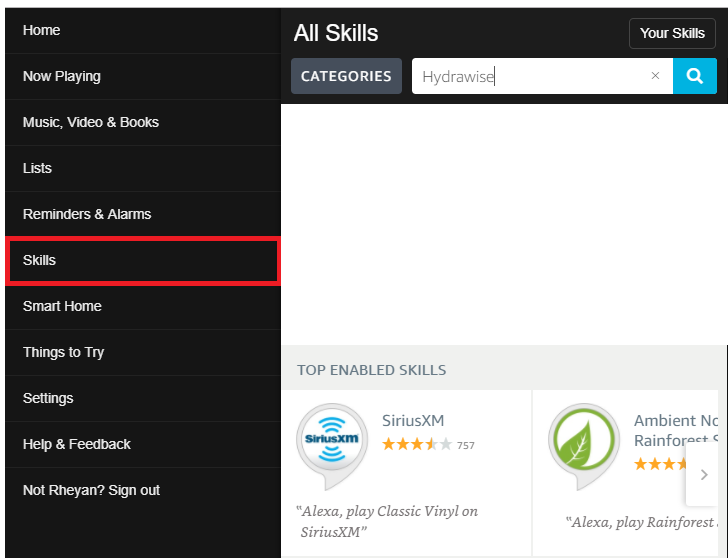


You will then be brought to the enable screen. Click **ENABLE**.

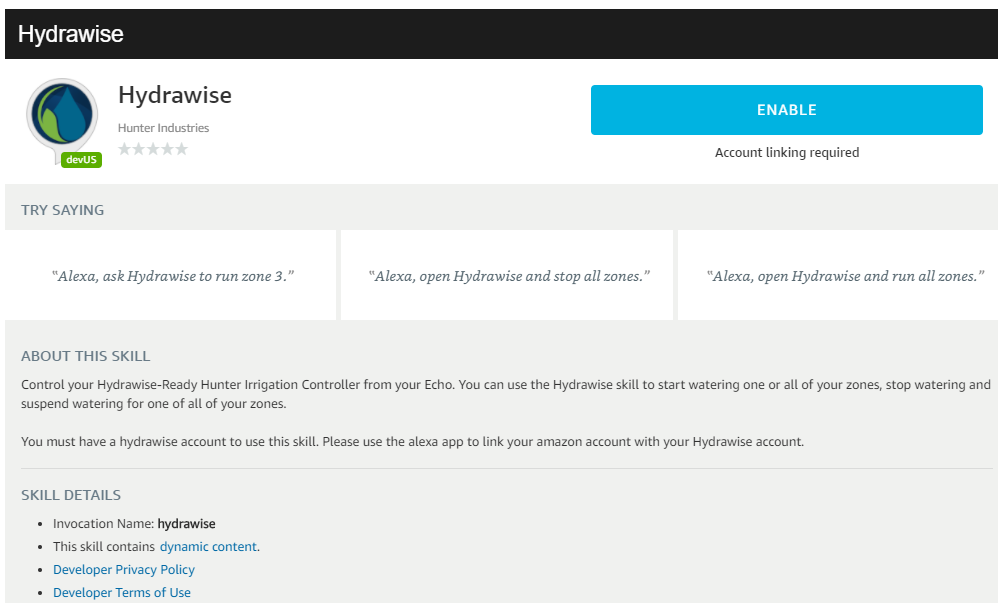


This will open a new window where you can log in to your Hydrawise account.


IMPORTANT: Please make sure you have pop-ups enabled for the Hydrawise log-in window. If pop-ups are blocked, you will not be able to log in and continue the linking process.

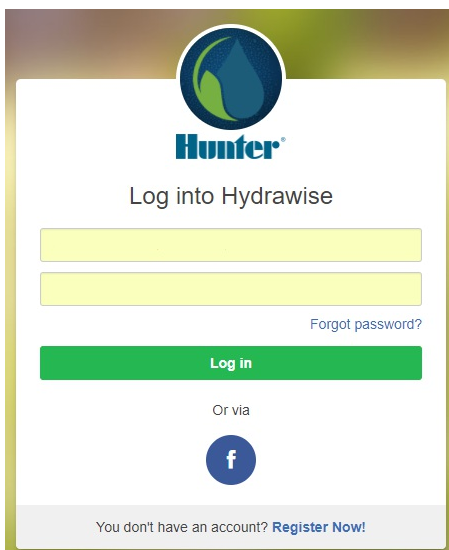


If you are already logged in, you will see the next dialogue box appear.

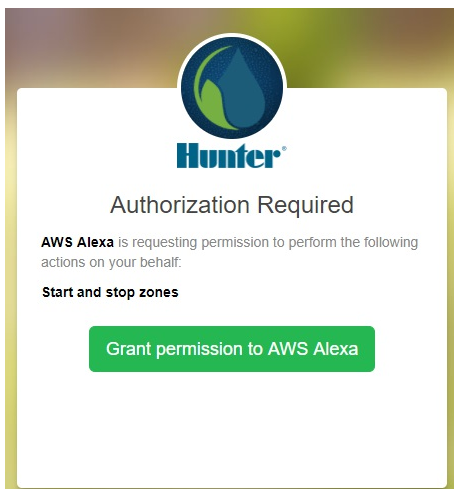

Click **Grant permission to AWS Alexa**. You will then receive a confirmation that Hydrowise was successfully linked and you can close the window.

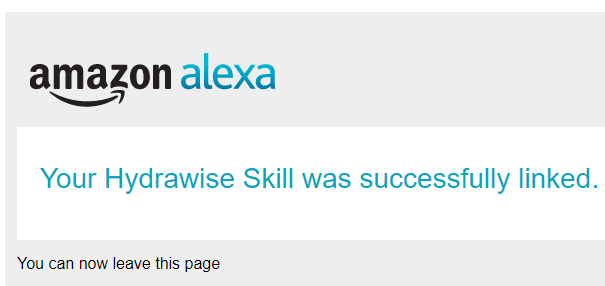

To check that your accounts are linked to your Alexa Dashboard, click **Skills** on the left-hand menu. Then click **Your Skills** on the top right.

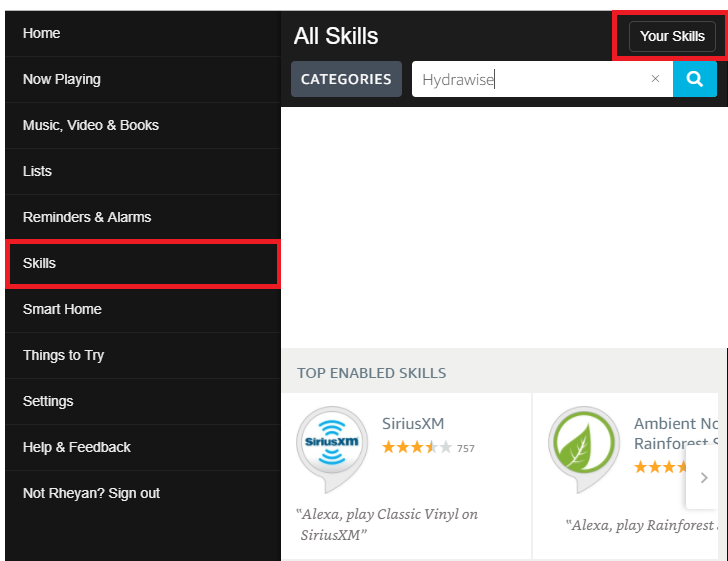

You will then see a list of **Your Skills**. Hydrowise should be listed.





TRY SAYING

"Alexa, ask Hydrawise to run zone 3."

"Alexa, open Hydrawise and stop all zones."

"Alexa, open Hydrawise and run all zones."

Using Alexa to control your Hydrawise

Zones can be started or stopped by referencing the zone number (do not use the zone name). For example, if your Zone 1 is called "Front Garden" and you want to start it, you can say, "Alexa, ask Hydrawise to start Zone 1."

Alexa supports the following key phrases:

- Alexa, ask Hydrawise to start/run zone {number}.
 - This command will start a single zone for its default irrigation time.
 - e.g., *Alexa, ask Hydrawise to start Zone 5.*
- Alexa, ask Hydrawise to start/run zone {number} for {x} minutes.
 - This command will start a single zone for a specific time
 - e.g., *Alexa, ask Hydrawise to run Zone 1 for 10 minutes.*
- Alexa, ask Hydrawise to start/run expander {expander number} zone {number}.
 - This command will start a single zone on controllers with expansion modules
 - e.g., *Alexa, ask Hydrawise to start Expander 1, Zone 1.*
- Alexa, ask Hydrawise to start/run all zones.
 - This command will start all zones for their default irrigation time.
- Alexa, ask Hydrawise to stop/finish zone {number}.
 - This command will stop a single zone if it is currently running.
- Alexa, ask Hydrawise to stop/finish expander {expander number} zone {number}.
 - This command will stop a single zone on an expansion module.
- Alexa, ask Hydrawise to suspend zone {number} until {time/date}.
 - This command will suspend all zones for a period of time.

Home Automation - Control4

Hydrawise is now compatible with Control4 home automation software.

Control4 installers can now download drivers to allow the integration.

From the Control4 app, you can:

- View icons and zone information
- View proposed watering
- Manually start a zone
- View active (watering) stations

NOTE: More details on Control4 integration can be found using this link: [Control4 Details](#).

HPC - Installation

Ensure you have a strong Wi-Fi signal. Wi-Fi connectivity can be tested on the HPC panel itself (signal strength is shown when you select a wireless network). If you have any issues connecting the controller to the router, please verify all Wi-Fi specifications [here](#).

Remove Pro-C Face Panel

1. Remove ribbon cable with power off.
2. Press down on white hinge release button.
3. Remove face panel.



Install HPC-FP Face Panel

1. Press blue hinges together and attach new HPC panel.
2. Reconnect ribbon cable
3. Close and turn power on



For information on complete setup in the application,
please visit our "[How To Guide](#)" section.

HPC - Hunter Remotes

The HPC face panel quickly and easily upgrades Pro-C® controllers (PC400 models manufactured since March 2014) to next-generation smart controllers via the Hydrawise platform.

It also allows end users and contractors to manually operate their systems using a Hunter remote and/or smart device to turn on a single zone or program.

There is no need to remove the smart port adapter from the Pro-C controller during the upgrade. The ultra-durable Hunter remote units provide contractors and homeowners with simple, remote-operated manual operation capabilities in the field.

Compatible models include all Hunter remotes:

SRR, ICR, ROAM, and the ROAM-XL.



HPC- WRCLIK and HC Flow Meter

In the event you will need to install a flow meter and a rain sensor on the **HPC** controller, you will need to install using the following instructions. The **HPC** controller utilizes a single SEN output so these steps are necessary to make this work. For correct field wiring of the flow meter, please reference the article [here](#).


NOTE: The software will only recognize the flow meter for this type of installation. The Wireless Rain Clik will still shut down system after a rain event, but this will not reflect anywhere in the software. The reports will not show ANY data for the rain events.

IMPORTANT: You will see alerts for underflow from the flow meter since the system will continue to run even with the common circuit interrupted by the rain event. These alerts will have to be ignored for this type of application. For more details on alerts, please view this article [here](#).

Please reference chart and illustration below for controller wiring details.

Illustration	Terminals	Wires
Figure 1.	AC 1/ AC 2	WRCLIK Yellow
Figure 2.	COMMON	WRCLIK White
Figure 3.	Valve Common	WRCLIK Blue
Figure 4.	Flow meter - Blue/White	METER Blue/White

Right Click to View Larger image

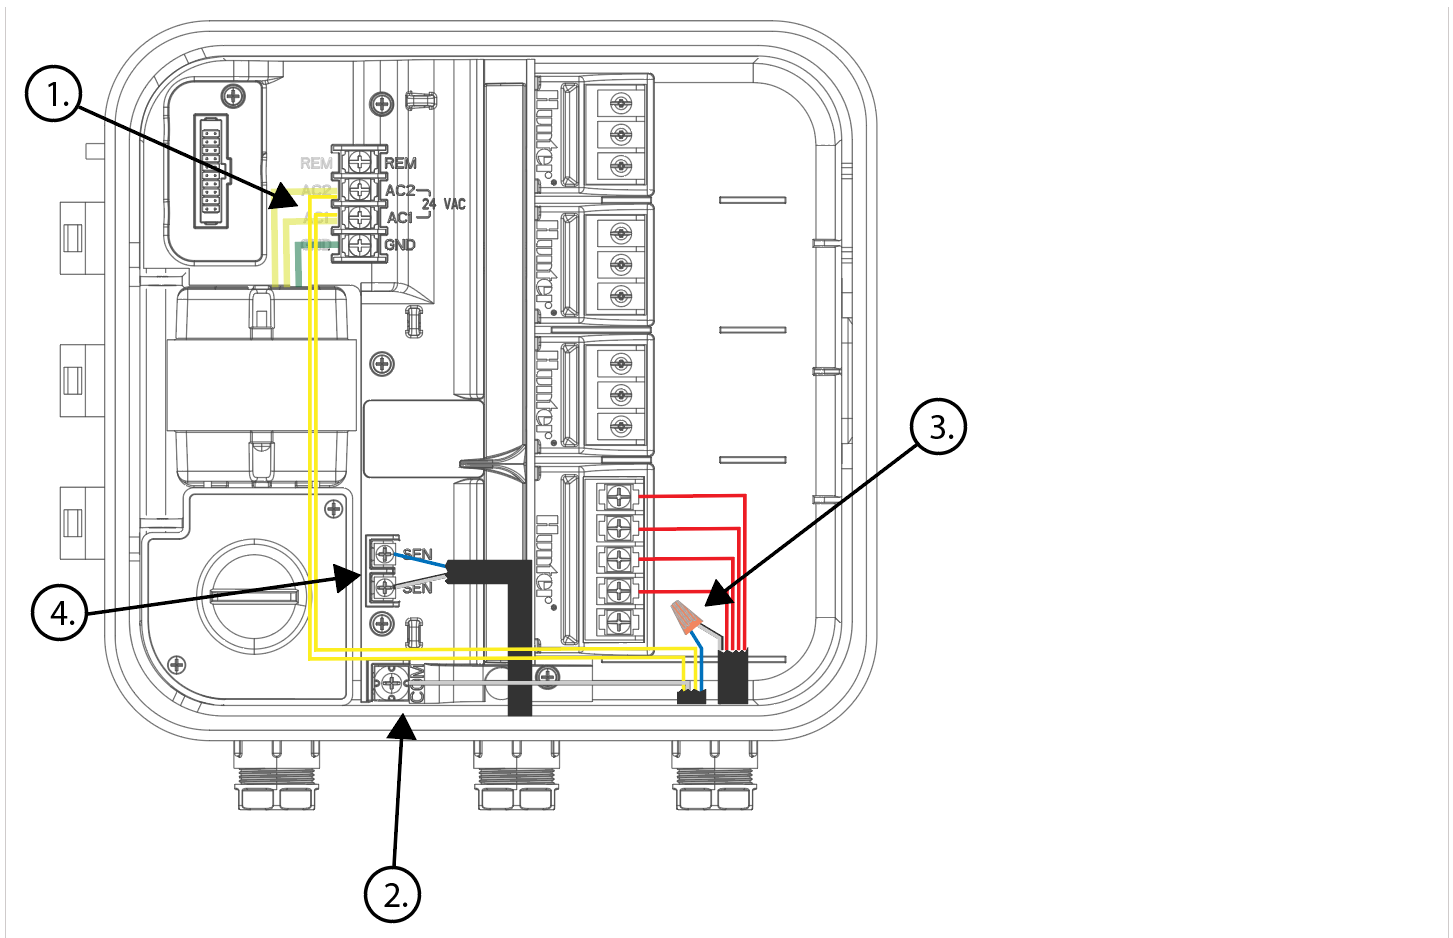

Flow Meter - Install Chart

The chart below will include all the necessary key points of the install to avoid any false alerts or readings.

Installation Steps	Description
Flow Meter Body	Analog dial for manual readings shown in US gallons. Units can be changed in App to gallons or liters.
Adapter	Brass unions included to fit your irrigation system.
Entry Location	Install between the master valve and zone valves. Meter should be installed 10 times pipe diameter before and 5 times after with straight pipe, no fittings.
Cable used	18 gauge - 1000 foot max Length. Shielded wire is highly recommended. Cable should consist of two dedicated wires and must not be in the same conduit, cable bundle or trench as the solenoid wires. DO NOT share common wire.
Flow meter body	Arrow indicates direction of flow.
Wire Connection	Blue/White wire only, red not used. See sensor configuration for more info based on model controller.
Log in to your account	Enter your login information.
Create your flow sensor	App will show options for all HC meters.

Flow Meter - Quick Start Guide

Please click on the link below to download the flow meter connection guide.

[Connecting Your Hydrawise Flow Meter](#)

Flow Meter - Specifications

HC FLOW METER SPECIFICATIONS




	HC-075-FLOW (¾")	HC-100-FLOW (1")	HC-150-FLOW (1½")	HC-200-FLOW (2")
Inlet/outlet connection size	¾" NPT body, male thread with 1" NPT male adapter	1" NPT body, male thread with 1.5" NPT male adapter	1½" NPT body, male thread with 2" NPT male adapter	2" NPT body, male thread with 3" NPT male adapter
Meter internal diameter	¾"	1"	1.5"	2"
Minimum flow (GPM)	0.22	0.3	0.88	1.98
Maximum recommended flow (GPM)	15	30	66	105
Maximum flow rate (GPM)	21	34	88	132
Dial reading (US gal)	1 pulse per 0.1 U.S. gal	1 pulse per 1 U.S. gal	1 pulse per 1 U.S. gal	1 pulse per 1 U.S. gal
Maximum working pressure (PSI)	230	230	230	230

Flow Meter - Test

If your flow meter is working but is not recording data in your **Dashboard** or events, follow the steps here:

1. If you can access the wires at the flow-meter end, strip the two wires back (if you're using quick disconnects, you can use a paper clip or wire to make contact) and touch them together. Do this 10 times, as each contact will record a pulse.
2. Access your app and see if flow data was registered.
 - If yes, your wiring and system are set up correctly. Reconnect to the flow meter and run a large flow (lots of sprinklers) zone. Did you get a flow on your app? If yes, all is OK. If no, contact support@hydrawise.com.
 - If no, go back to the controller and use another piece of wire to connect one end to either sensor 1 or sensor 2 (the port the flow meter is normally connected to). Then tap the other end against the sensor common (in the blue section). Do this 10 times.
3. Go to the app and see if it registered flow data.
 - If yes, there is a problem with the wire running to the flow meter.
 - If no, contact support@hydrawise.com.
4. To test the sensor inputs on the controller, you can use the same method with a paper clip or wire to make contact between sensor 1/sensor 2 and the sensor common. Do this 10 times and then check for flow data in your Dashboard.

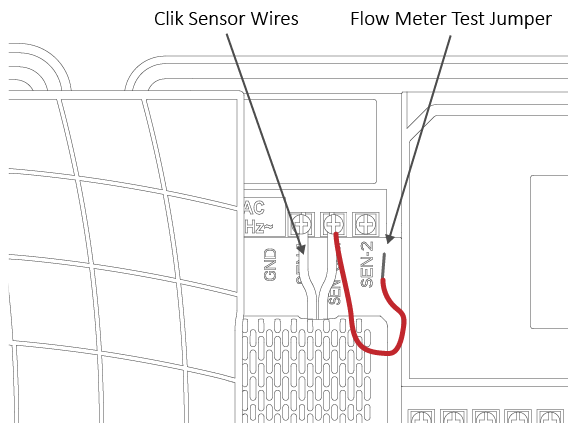

IMPORTANT: Our controller is not polarity sensitive. There is no risk of electric shock when performing these tests. However, if you feel uncomfortable, please contact a qualified technician or irrigation specialist for further assistance.

NOTE: If it works at the controller end but not the flow-meter end, there is a wiring fault.

If it doesn't work at the controller end, contact support@hydrawise.com.

If it works at both ends, but still does not register flow on the app, contact support@hydrawise.com.


Flow Meter - Custom Flow Sensor Configuration

To add a custom flow sensor, go to [Sensors](#) from your web browser or smartphone application.

Click **Add Custom Sensor Type**

Custom Sensor Types

Create a custom sensor when you have a non standard flow meter, or you wish to create some non standard level sensors.

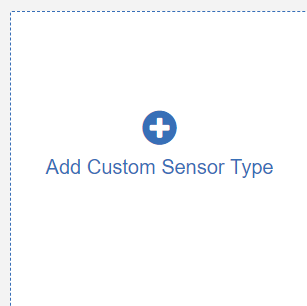

A dialogue box will appear for you to enter your custom flow meter details. Make sure you enter the calibration details for your custom pulse-based flow meter. Please refer to the manufacturer specifications to find out the calibration. Otherwise, you will not get accurate readings to display on your flow data.

Edit Custom Sensor Type

Sensor Type Name

Assign a descriptive name for this sensor definition

Type of Sensor

Flow Meter

Number of litres per pulse

0

litres per pulse

Flow Meter Action

Record water usage

Choose what actions this flow meter can cause

Cancel

OK

NOTE: For our system to detect the correct flow data and reflect it on your **Dashboard** reports, any third-party flow meter used must be a true pulse flow meter or have a reed switch. We aim for a minimum of 10 pulses per min and a maximum of 120 pulses per min. That means if the flow rate was 10 gal per min, 1 pulse per gallon needs to be set.

When using a third-party flow meter, please ensure it meets the specs above and is calibrated correctly. Otherwise, data will not reflect accurately in reports. Also, note that the wiring is not polarity sensitive. As long as you have one wire in a **Sensor Port** and a **Sensor Common**, the device will work correctly. For flow meters that use three wires and meet the specs above, configure the wiring until you find the two correct wires to use.

Flow Meter - Winterization

We recommend that a qualified licensed contractor perform this type of winterization method. The blowout method utilizes an air compressor with a cubic foot per minute (CFM) rating of 80-100 for any mainline of 2" or less. The compressor is attached to the mainline via a quick coupler, hose bib, or other type connection, which is located beyond the backflow device. Compressed air should not be blown through any backflow or flow meter device. For additional winterization procedures, we highly recommend contacting the local dealer for the most common local practices. In the event you need to blow upstream from where the flow meter is located, we recommend bypassing the meter by temporarily installing a SCH 80 or galvanized nipple. See the size chart below:

Model	Description	Male-Thread NPT	Nipple Length
HC-075-FLOW	Flow Meter w/ ¾ NPT threads	1" NPT	5"
HC-100-FLOW	Flow Meter w/ 1" NPT threads	1 ¼"NPT	5"

Find a Hunter Distributor closest to you using our interactive lookup - [Get Hunter](#)

For step-by-step instructions on installing the nipple to bypass the flow sensor, **CLICK** on this link: [Flow Meter Winterization Bypass](#)

Sensors - Configuration

Hydrawise supports two types of sensors:

1. Flow sensors that measure water usage for an irrigation zone (or zones).
2. Rain sensors, wind sensors, and moisture sensors (sometimes called on/off sensors) that allow you to suspend watering cycles for a zone (or zones).

Flow Meters

Flow meters measure the amount of water going onto each zone. This is really useful for understanding water usage and monitoring issues such as broken pipes.

Hydrawise reporting allows you to see how much water is used for each zone and how much water is used across your system.

With a flow meter, you can also create alerts for flow issues, which will keep you up to date on what's happening (particularly important for unattended homes). See [Creating Alerts](#) for more information.

Flow Meters	
US Hunter HC Flow Meters	3/4 inch NPT Flow Meter
US Hunter HC Flow Meters	1, 1/5, or 2 inch NPT Flow Meter
Metric Hunter HC Flow Meters	20mm BSP Flow Meter
Metric Hunter HC Flow Meters	25, 40, or 50mm BSP Flow Meter
Discontinued Sensors	Flow Meter with 3/4 inch coupling
Discontinued Sensors	Flow Meter with 1 inch coupling

Rain/Moisture Sensors

Hydrawise also supports standard open/closed contact rain sensors and soil moisture sensors. In fact, you can use any generic type of sensor that has an open/close contact.

These sensors use two wires and are usually labeled as normally open (sometimes called NO) or normally closed (sometimes called NC).

A rain or moisture sensor is usually used to stop irrigation. However, you can also create your own custom sensor types to start irrigation or for other advanced applications. See [Creating a Custom Sensor](#) for more information.

HUNTER CLIK	
Rain Sensor (Normally Open)	A standard rain sensor (use this if you have wired the rain sensor's normally open wire to the controller)
Rain Sensor (Normally Closed)	A standard rain sensor (use this if you have wired the rain sensor's normally closed wire to the controller)
Soil Moisture Sensor (Normally Open)	A standard soil moisture sensor (use this if you have wired the soil moisture sensor's normally open wire to the controller)
Soil Moisture Sensor (Normally Closed)	A standard soil moisture sensor (use this if you have wired the soil moisture sensor's normally closed wire to the controller)

Wiring

Flow meters are supplied with [detailed installation instructions](#).

The flow meter wires need to be cabled back to the controller and connected to the **Sensor** inputs on the controller. See chart below for wiring standard Hydrowise flow meters (Sizes include 3/4", 1", 1.5", 2")

FLOW METER WIRE	SCREW TERMINAL	CONTROLLER
BLUE	SEN 1, 2	HC
BLUE	SEN 1, 2	PRO-HC
BLUE	SEN	HPC-FP
WHITE	COM	HC
WHITE	SEN COM	PRO-HC
WHITE	SEN	HPC-FP
RED	Not Used, Cap off	N/A

SENSOR WIRE	SCREW TERMINAL	CONTROLLER
Wire 1	SEN 1, 2	HC
Wire 1	SEN 1, 2	PRO-HC
Wire 1	SEN	HPC-FP
Wire 2	COM	HC
Wire 2	SEN COM	PRO-HC
Wire 2	SEN	HPC-FP

WIRELESS RAIN CLIK



SCREW TERMINAL

CONTROLLER

Yellow/Yellow	24V/24V	HC
Yellow/Yellow	AC1/AC2	PRO-HC
Yellow/Yellow	AC1/AC2	HPC-FP
Blue	SEN 1, 2	HC
Blue	SEN 1, 2	PRO-HC
Blue	SEN	HPC-FP
White	COM	HC
White	SEN COM	PRO-HC
White	SEN	HPC-FP
Orange	Not Used for Hunter Controllers	Open Circuit Controllers Only

Once you've wired your rain, moisture sensor or flow meter, configure it in your Hydrowise account as shown below.

Sensor Configuration

There are two steps to getting your sensor to work for each of your zones:

- Create a new sensor in your Hydrowise account under [Sensors](#). Choose the controller the sensor is connected to and the sensor input you connected it to. Also, choose your sensor type as outlined below or [create a custom sensor](#).

Add New Sensor

Sensor details

Set zones

Sensor Name
Assign a descriptive name for this sensor

Type of Sensor
Choose the type of sensor you have installed. You can also create a custom sensor type if you have something non standard.

1 Inch Brass Flow Meter

Create New Sensor Type...

Controller
Choose the controller that this sensor is wired to

My Controller

Controller Input
Choose the input on the controller that this sensor is wired to

SENSOR 1

Cancel

< Prev

Next >

✓ OK

Once you've created your sensor, assign the zones that will use the sensor in the sensor table.

Add New Sensor

Sensor details

Set zones

Select Zones
Select the zones which will use this sensor

Available zones

Zone 1

Exp1 Z1

Selected zones

Smart Water

Smart Water 2

Cancel

< Prev

Next >

✓ OK

Create a Custom Sensor You can also create custom sensors in your Hydrowise account under **Sensors**. Some examples of custom sensor types are:

- A flow meter of a different size to the standard Hydrowise flow meters.
- A sensor to conform to restrictions that specify no watering for a minimum period of time after rain is detected.
- A sensor to start irrigation if motion is detected (Enthusiast Plan only)

To add a custom sensor type, go to **Sensors** and click on **Add Custom Sensor Type**. Give the sensor a name and choose its type as outlined below.
Flow Meter Liters per pulse: The number of liters of water expected to pass through the flow sensor per flow meter pulse (you can get this information from your flow meter's specifications)
Normally Open Sensor/Normally Closed Sensor Sensor Action: Whether the sensor should cause a zone to start or stop.
Start a Zone If the zone should start, choose the minimum number of seconds before the sensor can cause the same zone to start again.
Stop a Zone If the zone should stop, choose the number of seconds to delay before stopping the zone, and how long the zone should be disabled. For example, some watering restrictions require that if rain is detected, sprinklers should not run for at least two days.

Add Custom Sensor

Sensor Type Name

Assign a descriptive name for this sensor definition

Type of Sensor

Normally Open Sensor

Sensor Action

Stops a Zone

Choose what happens when this sensor becomes active

Delay before stopping

10 seconds

Minimum number of seconds before stopping a running zone

Minimum off period

10000 seconds

Minimum number of seconds the zone should be disabled for

Cancel
OK

Sensors - Klik Sensor Status

Please take note of the sensor states below once you've successfully set up your sensor through the Hydrowise application.

Normally Closed (Default Setup)

Klik Sensor		
Green	Dry, Not Active	Watering will occur
Red	Wet, Active	Will not water

Note: A good example would be a simple switch where closed would represent **ON** position and open would mean the **OFF** position.

Normally Open (Bypass Setup)

"Normally open" is used to bypass the sensor, so you can activate it manually when you want to suspend watering using the rain sensor. Otherwise, the default setup is to use "normally closed."

For more information on configuring sensors, check our guide [here](#).

Sensors - Installing Personal Weather Station

Installing your own weather station

Installing your own weather station is not a requirement for using a Hydrowise controller. The vast majority of customers use one of the 25,000 weather stations already available to each Hydrowise controller. You may have already realized that the Hydrowise irrigation system is driven in part by temperature, rainfall measurements, and predictions sourced from a weather network called Weather Underground.

Worldwide, the network has tens of thousands of privately owned and operated weather stations that contribute data to be shared by all. During setup of your Hydrowise controller, you would normally select three or more nearby stations for temperature and rainfall calculations and decisions. Since Weather Underground is an open network, you have the option of setting up your own weather station to report and share weather data with others. It is relatively easy and inexpensive to do so.

There are a few possible reasons to set up your own station:

- You don't have any nearby stations to select from.
- You want your observations to be as accurate as possible.
- You have other uses for the local climate information.

There is a wide range of weather stations available on the market suitable for uploading weather data to Weather Underground. The following link provides the most common [Stations](#).

The different brands offer different measurements, accuracy, and build quality. Consequently, they vary in price from about \$100 (U.S. dollars) to \$1,000. They generally measure the following parameters:

- Indoor temperature and humidity
- Outdoor temperature and humidity
- Rainfall
- Wind speed
- Wind direction
- Atmospheric pressure

You can refer to this link for the exact steps to register your personal weather station. [Weather Underground](#)

Once Weather Underground has approved and are broadcasting the PWS, please provide us with the PWS ID. We can upgrade you to the free PWS plan so you have access to your own weather station. [Contact Us](#)


Valve - Wire Distance

Below is a chart indicating the maximum wire runs that can be used when installing Hunter AC solenoids and valves.

Valve Wire Sizing							
Ground	Control Wire						
	18	16	14	12	10	8	6
18	850	1040	1210	1350	1460	1540	1590
16	1040	1340	1650	1920	2150	2330	2440
14	1210	1650	2150	2630	3080	3450	3700
12	1350	1920	2630	3390	4170	4880	5400
10	1460	2150	3080	4170	5400	6670	7650
8	1540	2330	3450	4880	6670	8700	10530
6	1590	2440	3700	5400	7690	10530	13330

Valves - Wiring Diagram

Please click on the link below for the downloadable version of the controller to valve wiring diagram. [Hydrawise Controller Connection Diagram](#)

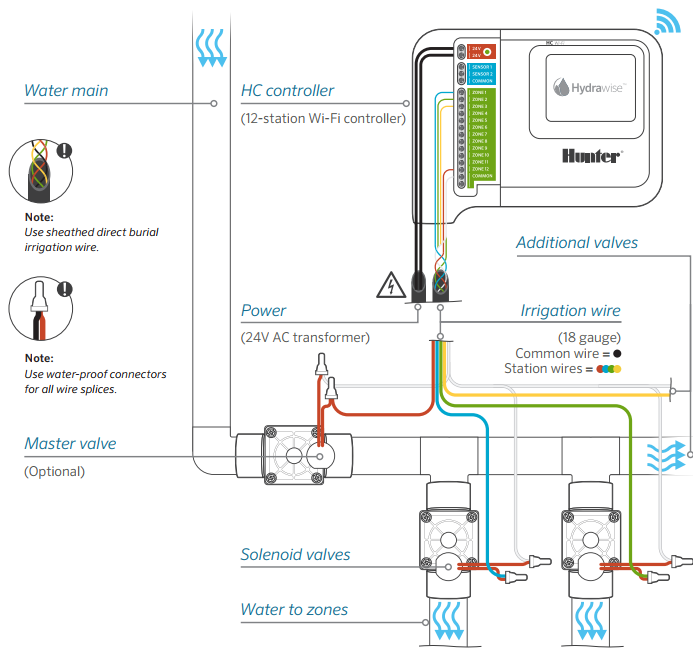


Master Valve - Configuration

A master valve is an automatic valve installed at the point where the irrigation system connects to the water supply. (Sometimes this circuit is called a “pump start circuit.” Both types work in a similar fashion, and can be used as a pump and/or a master valve.) The controller turns the master valve on and off.


How does it work?

Zone valves are the individual valves that operate a group of sprinklers or drip emitters. A Hydrowise controller supports 6 or 12 zone valves, depending on the model. Typically, one zone valve is turned on at a time and controls the irrigation in a specific area of your landscape. Whenever one of the irrigation zone valves is told to open by the controller, the controller also signals the master valve to open. This means that the master valve acts somewhat like a backup valve or a fail-safe valve. The purpose of the master valve is to shut off the water to the irrigation system when no zone valves are operating. The image below shows a master valve operating connected to Zone 12 on a Hydrowise controller.

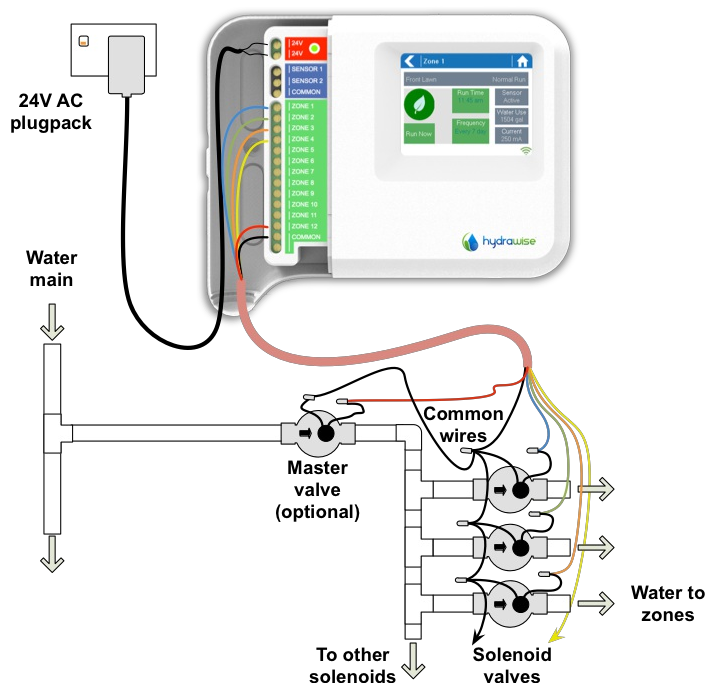

Configuring Master Valve - HC

With a Hydrowise controller, any one of your 6 or 12 zones can be configured to act as a master valve. The master zone is configured on the [Zones and Schedules](#) page above your

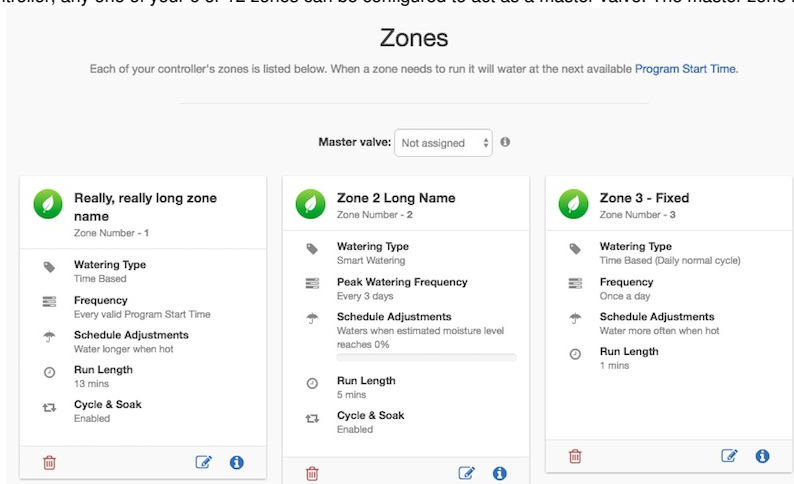


list of irrigation zones.

To select a master valve, select the relevant zone from the list next to the text that says **Master valve**.

Initially, no master valve is configured and all zones on the

Configuring Master Valve - PRO-HC

With the Pro-HC, setting the master valve (MV) is similar. All you need to do is select whether you have a MV as shown below.



You no longer have to select which zone the MV is connected to, as the option will be different depending on the controller you select when setting up your controller for the first time.

Configuring Master Valve - HPC-FP (Panel for PC-400 controller)

The default is for all stations to have the master valve/pump start circuit ON. The master valve/pump start can be set **ON** or **OFF** by station,

regardless of which program the station is assigned.

First, make sure you have the master valve selected "YES" in the box below:

Zones

ed below. When a zone needs to run it will water at the i


Master valve: Yes

Zone 2

Zone 2

Watering Type

Next, follow the steps for initializing the P/MV for each zone.

- 1. Click the  icon for the zone in "zones and schedules"
- 2. Click **Next** three times to enter the advanced section or programming.
- 3. You can now choose either of the following:
 - 1. Use **Global Master Valve Setting** (Turns the P/MV circuit ON)
 - 2. Use **Disable Master Valve** (Turns the P/MV circuit OFF)

Zone Details > Time Based Schedule > Cycle & Soak > Advanced

MASTER VALVE

☒ Use Global Master Valve Setting ☐ Disable Master Valve

WATERING ADJUSTMENT

Fine tune your watering if your zone appears to be too dry or wet

Water Less

Normal

Water More

Water 20% more

Cancel

< Prev

Next >

OK